

Instructions for Use



VA131 2019 - ENG - Rev08

lisa

VA131-17 VA131-22

Table of contents

Conformity	5	User management	41
Symbols and messages	6	Traceability options	42
Introduction	9	Hide/Unhide a cycle	42
About this manual	9	Managing printers	44
Use restrictions	10	Printer selection (optional)	44
Safety information	11	Label printer selection (optional)	44
Safety warnings	11	Label printer usage (optional)	45
Responsibility	15	Label content description	47
Getting started	16	Device tests	48
Unpacking	16	Device performance tests	48
Handling	19	Bowie and Dick test	49
Product description	20	Helix Test	52
Installing the device	25	Vacuum Test	55
Operating the device	27	Sterilization cycles	57
User interface menu	29	Load maintenance and preparation	57
Device setup	35	Prepare the sterilizer	59
ioDent	37	Sterilization cycle description	60
User authentication	37	Sterilization cycle management	61
EliTrace	37	Unloading	65
Set the EliSense system	38	Sterilization cycle report	65
USB pen drive	39	Maintenance	70
Standby mode	39	Warnings for maintenance operations	70
Administrator	41	Ordinary maintenance	71

50-cycle or monthly maintenance	73
400-cycle maintenance	79
800-cycle or biannual maintenance	82
800-cycle maintenance	89
4000-cycle or five-year maintenance	91
Extraordinary maintenance	92
Disposal	93
Diagnostics	94
Errors	94
Troubleshooting	99
Emergency door opening	107
Technical data	110
Sterilization cycles	111
Sterilization cycle phases	115
Technical data	118
Recommendations for validation	120
Diagrams	121
Water quality	122
Accessories, spare parts, consumables	123
Authorized W&H service partners	130
Documentation forms	131
W&H installation report	131
Helix Test documentation form	134

Conformity

CONFORMITY TO EUROPEAN REGULATIONS, STANDARDS AND DIRECTIVES

Sterilizer conforms with the following Regulations, Standards and Directives:

Standards and Directives	Description
 0051	Medical Device Regulation (MDR) / Regulation (UE) n. 2017/745 for medical devices. Class IIb devices, in accordance with the Rule 16 – ANNEX VIII of the above Regulation
	For Device in compliance with Machinery Directive (2006/42/EC), Low Voltage Directive (2014/35/EU) and Electromagnetic Compatibility Directive (2014/30/EU)
 0497 2014/68/EU	Pressure Equipment Directive (PED) / Directive 2014/68/EU (PED – Pressure Equipment Directive) for every sterilization chamber designed and manufactured in conformity to the ANNEX 1 and to the procedure described in the module D1 Annex III
2012/19/EU	Waste Electrical and Electronic Equipment Directive (WEEE)
EN 13060	Small steam sterilizers
IEC 61010-1	Safety requirements for electrical equipment for measurement, control and laboratory use, general requirements
IEC 61010-2-040	Safety requirements for electrical equipment for measurement, control and laboratory use; particular requirements for sterilizers and washer-disinfectors used to treat medical materials

Standards and Directives	Description
IEC 61326-1	Electrical equipment for measurement, control and laboratory use - EMC requirements; general requirements
IEC 61770	Electric appliances connected to the water mains - Avoidance of backsiphonage and failure of hose-sets

Note: Lisa sterilizers can be validated in accordance to EN ISO 17665.

Note: every new sterilizer is delivered with a Declaration of Conformity and a Warranty Card.

Symbols and messages

SAFETY SYMBOLS USED IN THIS MANUAL



WARNING: indicates a hazardous situation that, if not avoided, could result in death or serious injury.

Related to a sterilizer, these warnings indicate hazardous situations that could result in non-sterile conditions (e.g. non-sterile instruments) which could lead to fatal personal injury.



CAUTION: indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

SYMBOLS DISPLAYED ON THE PRODUCT



Hot surfaces!
Risk of burns.



Hot steam!
Risk of burns.



Consult the
Instructions for Use
for important
cautionary
information.



Do not use drinking
water to fill the clean
water tank; use
distilled or
demineralized water
only.



Consult the
Instructions for Use.



Disposal / Do not
dispose of with normal
waste.

PROPERTY DAMAGE MESSAGES

Notice: indicates information considered important, but not hazard-related. Typically to avoid damage to the product.

INFORMATION MESSAGES

Note: indicates additional information to facilitate use or understanding of the device.

STORAGE	Storage
TRANSPORTATION	Transportation
MD	Medical Device Only for MDR devices
SN	Serial Number
REF	Catalogue number
Max. P	Max. pressure / Max. allowable working pressure (MAWP)
	Temperature between XX °C and XX °C
	Manufacturing date (YYYY-MM-DD)
	Country of manufacture

	Manufacturer
UDI	Unique Device Identification
HIBC	Health Industry Bar Code in accordance with HIBC Standard
SMALL STEAM STERILIZER	Small Steam Sterilizer
	This side up
	Fragile, handle with care
	Keep dry
	The sterilizer must be transported by two authorized technicians due to its heavy weight
	ON (supply) IEC 60417-5007

	OFF (supply) IEC 60417-5008
	IN-position of bistable push control IEC 60417-5268
	OUT- position of bistable push control IEC 60417-5269
	USB connection
GS1 Logistic	GS1 datamatrix for logistic purpose
#	Sterilizer type or model
TC	Test connection

Introduction

CONTENTS

This section deals with the following subjects:

About this manual	9
Use restrictions	10

About this manual

INTRODUCTION

This manual contains the Instructions for Use of the W&H sterilizers VA131-17 and VA131-22, hereinafter referred to as Lisa 17 and Lisa 22.

FOR YOUR SAFETY AND THE SAFETY OF YOUR PATIENTS

The purpose of this manual is to provide information about the devices to ensure:

- proper installation and set-up
- optimal use
- safe and reliable operation
- compliance with regular maintenance and servicing requirements

Please carefully read the safety information [see "Safety warnings" on page 11].

OBLIGATIONS WITH REGARD TO THIS MANUAL

This manual is an integral part of the product and accompanies it for its entire working life. It must be consulted in all situations related to the life cycle of the product, from its delivery through to decommissioning. For this reason, it should always be accessible to operators both online and offline.

Contact customer service in the event the manual is unavailable. If the device is transferred, always attach the manual for the new owner.

MANUAL CONTENT

This manual contains the Instructions for Use and for maintenance of the following device versions:

- VA131-17
- VA131-22

Versions differ only for the chamber volume.

DISCLAIMER

All pictures, graphics and illustrations provided in this manual are for the comprehension of the text. They are not meant to be an accurate representation of product details. Thus, they should be taken as indicative only, and may differ from the actual product.

For any suggestions or remarks please send an email to office.sterilization@wh.com.

COPYRIGHT NOTICE

Copyright ©, W&H Sterilization Srl.

All rights reserved in all countries.

All drawings, images and texts contained in this manual are the property of the manufacturer. Even partial duplication of drawings, images or text is prohibited.

The information contained in this document is subject to change without prior notice.

Use restrictions

INTENDED USE

For Medical Device in accordance with Regulation EU 2017/745:

The small steam sterilizers are intended for the sterilization of invasive and non-invasive medical devices. The devices are intended for professional use by trained people only.

For other purposes out of the scope of Regulation EU 2017/745:

The small steam sterilizers are intended for the sterilization of devices other than invasive and non-invasive medical ones. The small steam sterilizers are intended for the sterilization in veterinary practices. They are also intended to be used for materials and equipment which are likely to come into contact with blood or body fluids, e.g. implements used by beauty therapists, tattooists, body piercers and hairdressers.

The devices are intended for professional use by trained people only.

PROVIDED FEATURES

See "Sterilization cycles" on page 111 for the full list of key program features, including sterilization time, temperature and recommended load type.

USER QUALIFICATION

The users who may operate the sterilizer are the following.

User qualification	Competences
Head of the clinic/practice	Legally responsible for: - the efficiency of the hygiene protocol in place - the sterilization process - the operators' training and training documentation - the correct operation and maintenance of the equipment
Trained operators	- Regularly attend the training for operating and using the sterilizer safely. - Use the sterilizer according to the Head of the clinic/practice's instructions.

Safety information

CONTENTS

This section deals with the following subjects:

Safety warnings	11
Responsibility	15

Safety warnings

THERMAL HAZARDS



- The chamber automatically begins to heat to high temperature as soon as the sterilizer is switched on – risk of burns!
- The trays and the sterilization load are hot at the end of each cycle. Use tray or cassette holders to empty the sterilization chamber.
- Always wear appropriate PPE during use of the device (e.g. gloves for cleaning, maintenance, etc...).

ELECTRICAL RISKS



- Do not pour water or any other liquids over the device (risk of electrical short circuits).
- Switch off the device and unplug the mains cable before inspecting, carrying out maintenance or servicing it.
- Ensure that the power receptacle the device is connected to is properly grounded.
- All electric devices connected to the product shall be of Insulation Class II (double insulated) or higher.
- Use only the mains cable provided by the manufacturer.

IMPROPER USE OF THE DEVICE



- The device must not be used in presence of explosive or flammable gases, vapors, liquids or solids.
- The device has not been designed for the sterilization of foodstuff or waste.
- Do not exceed the maximum load weight limits as specified in this manual (see "Sterilization cycle management" on page 61).
- Do not drink any water that has been inside the device.
- To prevent water leakage or damage, always close the water inlet tap before leaving the clinic for long periods or when no one is present. The manufacturer is not responsible for any damage caused if this instruction is not followed.

TAMPERING



- Do not remove the name plate or labels from the device.
- Repairs, maintenance or service must be carried out by authorized service providers always using genuine spare parts.

REQUIREMENTS



- Use only the mains cable set and accessories provided by the manufacturer.
- Serious incidents that have occurred in relation to this medical device should be reported to the manufacturer and competent authority in the country where the incident occurred.
- In case of malfunction of the device, contact an authorized technician or the manufacturer.

CYBERSECURITY

1) Device connectivity

The accessible external ports of the device are:

- Ethernet port, where present
Intended use:
 - Network services (see description below)
- USB ports
Intended use:
 - mass storage device, such as a pen drive, for cycle report saving;
 - mass storage device, such as a pen drive, for software update;
 - report printer
 - label printer
 - QR code reader (seen as a keyboard), for EliTrace functionality, where present;
 - Wi-Fi dongle key, for network services (see description below);
 - USB to Ethernet adapter for network services (see description below).

Network services are:

- remote data storage;
- label printer sharing;
- device user management;
- cloud communication for sending cycle data and device status and for software update.

Please note that the device functionality does not require connecting to the Internet.

Recommendation for cybersecurity

- All the listed ports and uses are available for both the device users and the service personnel, except for the software update that can be performed only by authorized personnel only (W&H partners or technicians).
- Update the device software to the latest version as recommended by the manufacturer.
- Use only trusted USB mass storage devices for report saving.
- Regularly backup the cycle reports to ensure to have a copy in case of cybersecurity events or incidents.
- Don't access the device web server functionality through links in e-mails.
- Ensure the mail service provider has a spam filter.

2) Device protective features for cybersecurity

The device is designed in such a way that a cyber attack or software failure does not compromise the safety in relation to the intended use. A successful cyber attack cannot result in direct patient harm: in fact, the device is not in contact with patients.

The device does not share any data (sensible and not sensible data) related to patients.

To further protect the device and minimize successful cyber attacks, the following precautions were taken:

- the access to the device operating system is not possible (user access to the operating system is disabled);
- a firewall is active on the device; all the device network connections (to and from the external world) are managed by the firewall which, following specific rules, filters them and blocks everything that is not strictly necessary for the device;

- the update/install operations are only possible using signed and encrypted software, provided by W&H;
- during the normal use, the operating system and the application (responsible for the device functionalities) are located in a read-only memory to avoid intentional corruption;
- all the cycle data are secured by means of checksum controls.

3) Cycle data storage

The device saves cycle data on the USB pen drive. Each file contains a control code that allows to check the file integrity.

4) Cloud secure communication

A secure communication (with authentication and authorization) can be established between the device and the cloud server for the following functionalities:

- remote software update;
- setting management;
- device monitoring;
- cycle data acquisition.

The user and authorized technicians can interact with the cloud server by means of a generic device (e.g.: PC, tablet, smartphone) with a web browser and proper authorization and authentication.

5) Infrastructure requirements

In order to minimize the possibility of cyber attacks, it is user responsibility to apply the following measures:

- software update/install shall be done by authorized and trained personnel only;
- it is recommended to activate a firewall on the router/modem used for the Internet connection.

Note: further security information is mentioned in the MDS2 document, which is available on request.

6) Software Bill of Material (SBOM)

The device provides the possibility to download the SBOM to the USB pen drive, by accessing the "System Info" menu page.

7) Events possibly caused by a cyberattack detectable by the user

The following situations, visible by the user, could be caused by cybersecurity events:

- frozen screen;
- black screen;
- significant slowdown when navigating the menus;
- malfunctioning or blocked network services (such as: remote data storage, label printer sharing, etc...).

8) Instructions for users on how to respond if a cybersecurity event or incident occurs

If a cybersecurity event or incident occurred, or in case of a suspect, the following indication shall be followed to minimize the impact and prevent further damage:

- to disconnect the device from the network (Ethernet cable and/or Wi-Fi dongle) to prevent spreading the damage to other devices;
- to disconnect the USB pen drive to reduce the possibility to corrupt stored data, like cycle reports;
- to inform the IT department and an authorized technician (or device manufacturer) and follow the indications they would provide to secure the affected device.

Responsibility

USER RESPONSIBILITY

- The user is responsible for the proper installation, the correct use and maintenance of the sterilizer in accordance with these Instructions for Use.
- The safety devices of the sterilizer are impaired when the product itself is not installed, used and serviced in accordance with these Instructions for Use.
- The Instructions for Use updated to the latest version is always available at www.wh.com.
- Keep these Instructions for Use for future reference.

MANUFACTURER RESPONSIBILITY

- The manufacturer can only accept responsibility for the safety, reliability and performance of the product when the product itself is installed, used and serviced in accordance with the Instructions for Use.
- Servicing by unauthorized persons invalidates all claims under warranty and any other claims.

Getting started

CONTENTS

This section deals with the following subjects:

Unpacking	16
Handling	19
Product description	20
Installing the device	25
Operating the device	27
User interface menu	29
Device setup	35
ioDent	37
User authentication	37
EliTrace	37
Set the EliSense system	38
USB pen drive	39
Standby mode	39

Unpacking

UNPACK THE STERILIZER




CAUTION! Heavy product. The sterilizer must be removed from the box and transported by two authorized technicians.


Weight with box:

- Lisa 17: 54 kg (119 lbs)
- Lisa 22: 56.5 kg (124.6 lbs)

Weight without box:

- Lisa 17: 47.5 kg (104.7 lbs)
- Lisa 22: 50 kg (110.2 lbs)

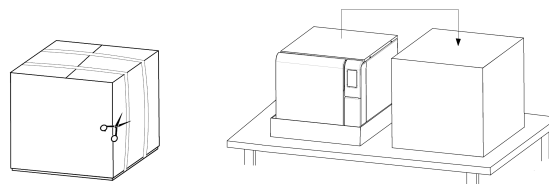

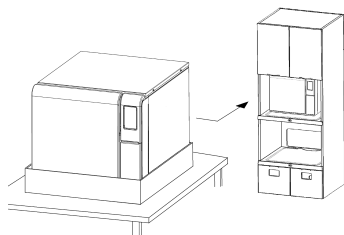


WARNINGS


Notice: check the external conditions of the box and the device. In case of any damage, immediately contact the dealer or shipping agent that has carried out the transport. Keep the packaging for shipping or transporting the device in the future.

Note: the packaging of the device is environmentally friendly and can be disposed of by industrial recycling companies.


CONTENTS OF THE PACKAGING

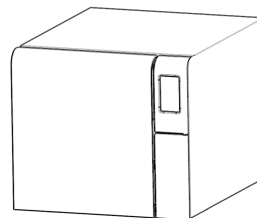


Sterilizer

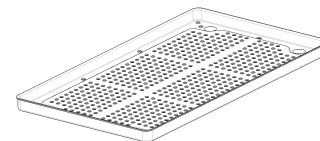


Trays (five)

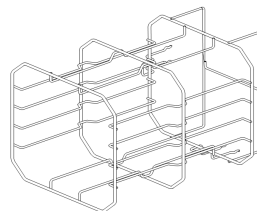

Reversible rack

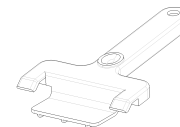


Tray holder

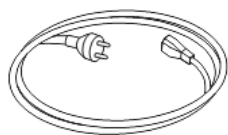


Mains cable



 
Drain tube



USB pen drive loaded with
Instructions for Use

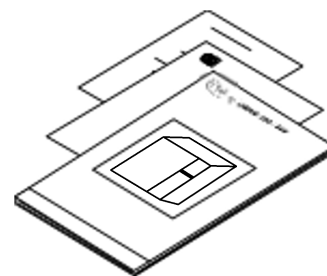

This manual, declaration of
conformity, warranty card, work
test report, maintenance sheet

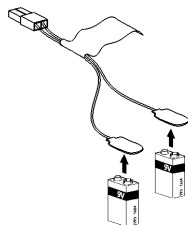

Emergency door opening tool



Tube for drain connection

ITEMS NOT PROVIDED WITH THE DEVICE

The following items are not provided:

- Water container to capture waste water during manual tank draining (volume larger than 5 l [1.3 gal]).
- LAN cable for connecting the device to a network (optional).

See "Accessories, spare parts, consumables" for a full list of optional accessories.

Handling


HOW TO RELOCATE THE DEVICE

Before transport:

- Completely drain both water tanks (see "Draining the used and clean water tank" on page 92).
- Allow the device chamber to cool down.
- Use original packaging when shipping or transporting the device. Replacement packaging materials are available from Service W&H.


Product description

FRONT VIEW

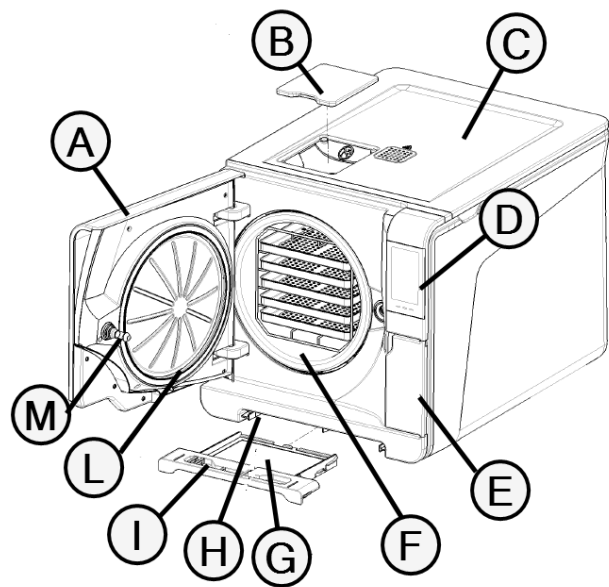


Part	Description
A	Chamber door
B	Water filling cover
C	Water tank cover
D	Touch screen
E	Service door
F	Sterilization chamber
G	Dust filter
H	Reset button of the safety thermostat
I	Emergency door opening tool
L	Door gasket
M	Door locking pin

UPPER INTERNAL STRUCTURE

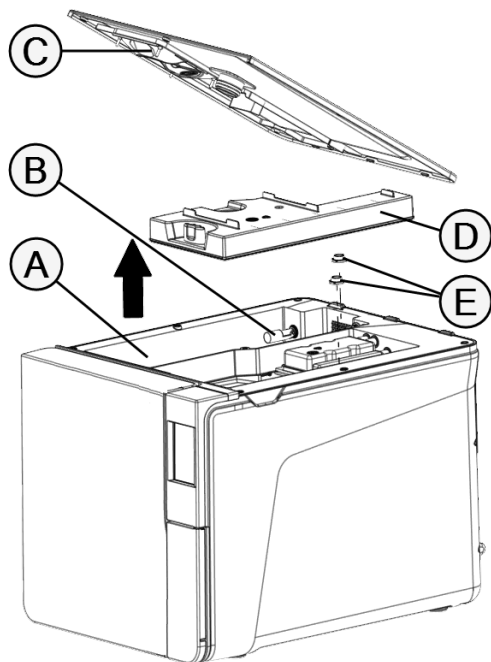


Part	Description
A	Clean water tank
B	Water level sensor
C	Water tank cover
D	Used water tank internal cover
E	Water tank filters

COMPONENTS BEHIND THE SERVICE DOOR

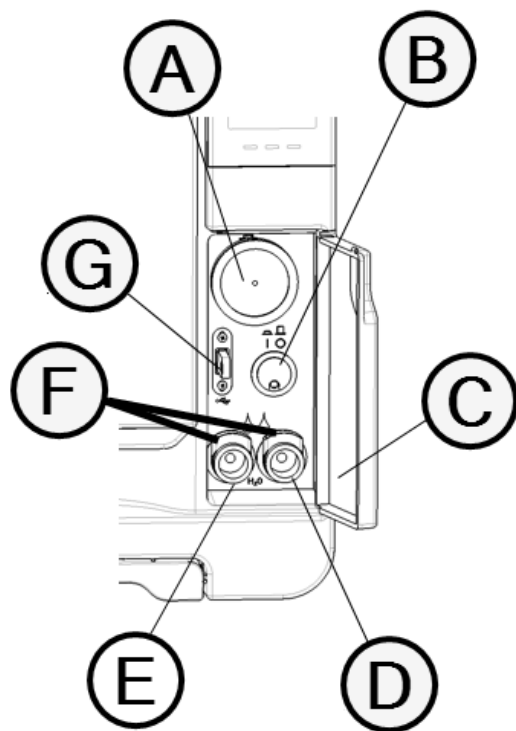


Part	Description
A	Bacteriological filter
B	Mains switch
C	Identification label
D	Used water drain connection (grey)
E	Clean water drain connection (blue)
F	Drain tube release button
G	USB port

REAR VIEW

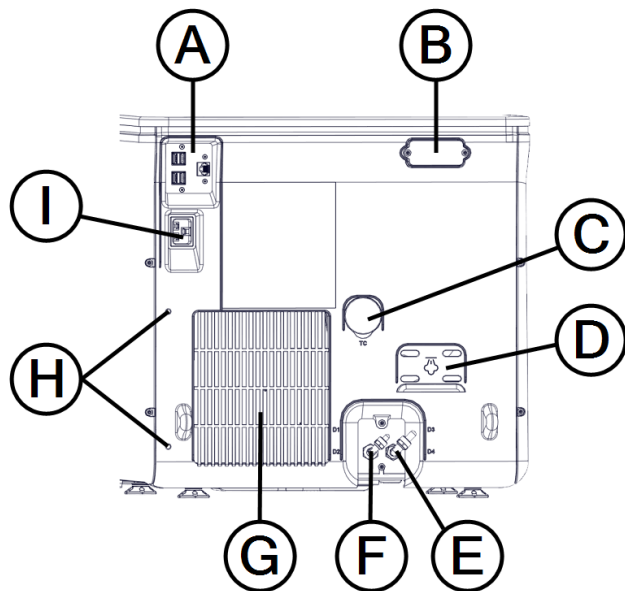

Part	Description
A	USB and LAN ports
B	Air gap cover
C	Test connection
D	Pressure safety valve cover
E	Used water drain
F	Water supply inlet
G	Condenser grid
H	Mains cable guide
I	Mains cable plug socket

CHAMBER ACCESSORIES

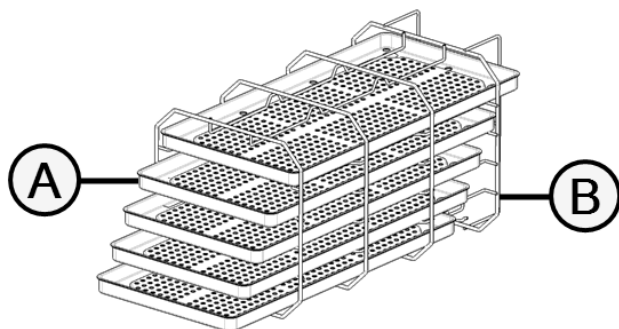

Part	Description
A	Tray
B	Chamber rack: ■ In the normal position, it can host 5 trays horizontally or 3 cassettes/containers vertically ■ In a 90° degrees rotated position, it can host 3 trays or 3 cassettes/containers horizontally

Installing the device

LOCATION REQUIREMENTS

Notice:

Do not place the device so that it is difficult to operate the controls behind the service door or to disconnect the mains cable.


Leave the condenser grid (rear side of the sterilizer) free from anything that might obstruct the air passage.

Surface materials should be water resistant. If sterilization cycles will be continuous, pay attention to the surrounding materials: steam can damage them.

The device must operate in absence of explosive atmospheres. The device must operate in a well ventilated room (indoor), far from sources of heat and from flammable materials.

Place the device on a flat and level surface.

Clearance requirements to ensure proper air circulation:

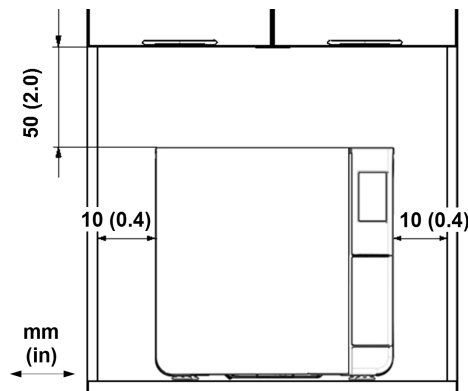

ELECTRICAL CONNECTIONS

All the cables and tubes connected on the rear side of the device must be placed far from the condenser grid (e.g. using the available guides).

Notice:

Use only the cord set provided by the manufacturer.

Ensure that external and internal surfaces are free from moisture or condensation before connecting to power.

The installation of the device shall be performed by two authorized technicians using PPE (Personal Protective Equipment) according to applicable standards.

The electrical power supply of the device must fulfill all applicable standards in the country of use, and must comply with the data label on the back of the device.

WATER CONNECTIONS

The device clean water tank can be filled manually by the user or automatically with a water supply system. The water supply system must deliver demineralized or distilled water meeting the specifications listed in this manual.




CAUTION! Do not install upstream water softeners or filters using oxidizing agents (e.g. chlorine), as they may compromise the water quality reducing device performance, and potentially causing damages.

Do not add any chemical/additive to the water.

The manufacturer's warranty is void if the sterilizer was used with water containing either chemical additives, or contaminant levels exceeding those listed in this manual. See "Feed water specifications [EN 13060]" on page 122.

Notice: the maintenance of the external water filling system must be done in exact accordance with the Instructions for Use given with the relevant system.

LAN CONNECTION

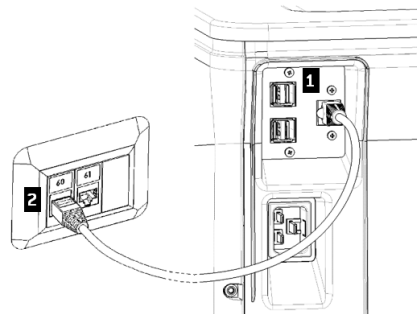

- 1** Insert a standard Ethernet cable in the LAN port of the device.
- 2** Insert the other end of the cable in the LAN port of your computer or computer network: when the device will be switched on it will connect automatically to the LAN.

WI-FI CONNECTION

For the Wi-Fi connection proceed as follows:

- 1** Insert the Wi-Fi dongle key in the USB port.
- 2** Read the Instructions for Use provided with the Wi-Fi dongle key.

INSTALLING THE DEVICE



WARNING! In case of device malfunctions immediately unplug the device and call for service. Do not attempt to repair the device by yourself.

Notice:

Please ensure that all installation requirements are met before plugging the device. See "Connection diagrams" on page 121. No other devices should be connected to the device power panel circuit.

- 1** Place the device on a sturdy, flat and level surface.


Note: if you need to move the device feet in backward position, install the safety bracket kit (X051125X) to comply with safety requirements (see the dedicated documentation).

- 2** Open the chamber door, remove all items from the sterilizer chamber except the chamber rack. Remove all plastic covers from trays.
- 3** Connect the auto-fill and auto-drain tubes in the rear of the sterilizer.
- 4** Connect the Ethernet cable or the Wi-Fi dongle key in the rear of the sterilizer.
- 5** Attach the mains cable to the socket in the rear of the sterilizer and route the cable through the cable guides.
- 6** Connect the mains cable to a wall outlet. For power supply requirements, see "Technical data" on page 118.

Operating the device

POWER THE STERILIZER ON/OFF

- 1** Press the power switch behind the service door: once switched ON, the visual indicator on the power switch turns green.

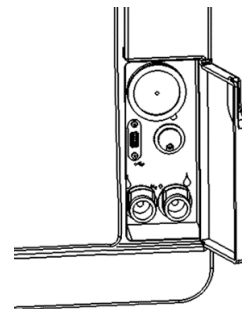


- 2** After a quick autotest the device automatically enters Standby mode. See "Standby mode" on page 39.

Note: at the first start-up of the device, the Guided Configuration procedure automatically appears; see "Device setup" on page 35.

- 3** Tap . The homepage appears with the enabled cycles.

HOMEPAGE DESCRIPTION

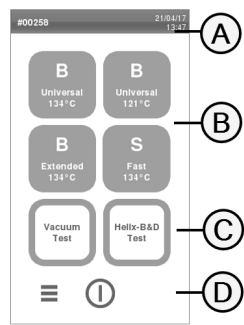

Part	Description
A	Title/purpose of the screen, or the cycle number and the current date and time.
B	Available cycles.
C	Available tests.
D	Additional buttons used to navigate the menu.

User interface menu

MAIN MENU FUNCTIONS

Note: this section describes the device functions. Please note that the availability of them depends on the device model and some of them might not be available for this model.

Icon	Label	Function
	Menu	Opens the menu.
	System Info	- Shows the system information. - During a cycle, shows the cycle parameters.
	Device Settings	Opens the pages to sterilizer management.
	Traceability	Opens the pages to: - monitor the performed cycle data. - manage users. - set the label printing options.
	Accessories	Opens the pages to accessories management.
	Maintenance	Carries out the maintenance procedure.

Icon	Label	Function
	EliSense Messages	Displays the history of EliSense suggestion pop-up and messages. Note: if there aren't EliSense pop-up/messages the function is disabled.
	EliSense Statistics	Accesses the sterilizer statistic (water consumption, energy consumption, cycle counter and cycle times).

SETTINGS MENU FUNCTIONS

Icon	Label	Function
	Device	Opens the pages to set the device.
	Language	Sets device language.
	Date & Time	Sets date and time format, current date and time and time zone.
	Sterilizer Name	Sets the sterilizer name.
	Energy Management	Changes the standby mode delay.
	Display	Sets the display brightness.

Icon	Label	Function
	Audio	Manages the sterilizer sounds.
	Cycle	Opens the pages to manage cycles.
	Cycle Exclusion	Sets the cycles menu.
	Measurement Units	Sets the unit of measure (temperature, water conductivity and pressure).
	Daily Cycle Program	Programs a sequence of cycles to be run on daily basis.
	Connectivity	Opens the pages to manage the network connection.
	Ethernet	Manages the Ethernet network.
	Wi-Fi	Allows wireless network selection and configuration.
	Network Status	Only with a network connection set. Provides information about the network status.

Icon	Label	Function
	ioDent	Only if this service is supported in the country of use, and if the sterilizer is connected to it. Shows the status of the connection with the W&H monitoring server.
	Akidata status	
	Remote Data Storage	Only with a network connection set. Opens the page to manage the remote storage.
	Settings	Only with a network connection set. Sets the parameters of the network location.
	Save all	Only with a network connection set. Copies all the files in the specified location in the network.
	Test	Only with a network connection set. Checks if the files can be copied to the specified location.
	USB options	Enables/disables USB warning messages.
	EliSense	Sets the option of the touch screen LEDs.
	Smart Intelligence	Only if activated in the EliSense menu. Enables each suggestion pop-up and messages.
	Traceability Settings	Chooses if the sterilizer is master or slave.

TRACEABILITY MENU FUNCTIONS

Icon	Label	Function
	Cycle History	Shows all the sterilization cycles and tests and prints reports and labels.
	Save	Saves all the sterilization cycle reports in the USB pen drive.
	User Management	Permits managing the users.
	Add User	Administrator only. Adds a user.
	Delete User	Administrator only. Deletes a user.
	Reset user PIN code	Administrator only. Resets a user PIN code.
	Change your PIN code	Changes the PIN code.
	Options	Administrator only. Permits the following: ■ Identifies and saves the operator who starts the cycle and releases the load. ■ Protects with a password the cycle start, the cycle stop and the load release.

Icon	Label	Function
	EliTrace	Allows to manage the instrument database.
	Label Printer	Optional, activated with an activation code. ■ Enables/disables the printing of the labels. ■ Sets the automatic or manual printing of the labels. ■ Sets the maximum storage time of the wrapped sterilized items.

ACCESSORIES MENU FUNCTIONS

Icon	Label	Function
	USB Pen Drive	Opens the formatting page of the USB pen drive.
	Format	Formats the USB pen drive.
	Label Printer	Optional, activated with an activation code. Permits to select the label printer and sets the printout layout.
	Local Printer	Selects a printer connected to the sterilizer.
	Shared Printer	Selects a printer connected to another sterilizer [connected via local network].

Icon	Label	Function
	Calibration	Adjusts the label printer to the edge of the label.
	Test	Prints a test label.
	Printer	Selects the printer model connected to the sterilizer. The icon appears disabled if the printer/Ethernet cable/Wi-Fi dongle key is not connected.
	Special Codes	Saves the codes issued by the manufacturer to activate special functions. Note: only for technical support.

Icon	Label	Function
	Chamber Cleaning	■ Shows the status of the cleaning operations. ■ Resets the cycle counter. ■ Displays the cleaning procedure videos.
	Tank Cleaning	
	4000 Cycle Service	Shows the number of cycles performed and left before the necessary maintenance.
	System Update	Installs and upload the software.

MAINTENANCE MENU FUNCTIONS

Icon	Label	Function
	Bact. Filter	■ Shows the status of the consumables. ■ Resets the cycle counter. ■ Displays the consumable replacement procedure videos.
	Dust Filter	
	Door Gasket	

COMMON COMMANDS AND ICONS

Icon	Function
	Enters/exits the standby mode.
 	Moves to the previous/next screen.
	Opens the homepage.
	Accesses to the sub-menus.
	Provides access to the setting screen of a specific area.
	Shows the list of all operating parameters of the sterilizer.
	Opens a screen with other settings/options.

Icon	Function
	Refreshes the page.
	Indicates the value that may be changed and appears by clicking on it.
	■ Confirms the active option. ■ Saves a setting or a parameter. ■ Answers YES to a question.
	■ Aborts the action/function. ■ Moves to the previous screen without confirming/making any changes nor saving any parameters. ■ Answers NO to a question.
	Indicates that the ECO DRY mode with extended drying is operating automatically.
	Indicates that the ECO DRY plus mode is operating automatically.
	Increases/decreases the value.
	Indicates that an error occurs.

Icon	Function
	Indicates that the option checked is working properly.
	■ Plays a video. ■ Starts a procedure.
	Pauses a video.
	Indicates that the chamber door is locked.
	Indicates that the chamber door is locking/unlocking.
	Indicates that the chamber door is unlocked and can be open.
	Programs a succession of cycles for daily repetition.
	Indicates that the option is ON and allows to set it OFF by touching it.
	Indicates that the option is OFF and allows to set it ON by touching it.

Icon	Function
 	Indicates that the option is active/not active.
 	Indicates that the option is enabled/disabled.
	Indicates that the user is using the administrator credentials.
	Gives information about the function displayed.
	Confirms the active option and saves a setting or a parameter.
	Copies the system info to the USB pen drive.
	Shows an animation about the replacement procedure.
	Shows a sterilization summary.

Device setup

GUIDED CONFIGURATION

At the first start-up of the device, the Guided Configuration procedure automatically appears; this procedure allows to set some parameters of the unit, such as:

- Language
- Network connection (where applicable)
- Time zone settings
- Date & time settings
- Device name

SET THE LANGUAGE

- 1** On the homepage, tap  >  >  > .
- 2** Tap the language you prefer.
- 3** Tap  to confirm and return to the homepage.

SET THE DATE AND TIME

To change the date and time format, current date and time and time zone:

- 1** On the homepage, tap  >  >  > .
- 2** Tap the value you want to change (format, time, date and/or time zone).
- 3** Tap the desired value.
- 4** Tap  to confirm and return to the previous page.

SET THE DEVICE NAME

To change the device name that appears in the cycle reports:

- 1** On the homepage, tap  >  >  > .
- 2** Tap the text box: a keyboard appears.
- 3** Enter the new device name.
- 4** Tap  to confirm.
- 5** Tap  to return to the previous page.

SET THE DISPLAY BRIGHTNESS

To change the display and LED brightness:

- 1 On the homepage, tap  >  >  > .
- 2 Tap  or  to change the value.
- 3 Tap  to confirm and return to the previous page.

SET THE AUDIO

To change the audio settings:

- 1 On the homepage, tap  >  >  > .
- 2 Tap the settings you want to change (select melodies or tones, volume setting and/or all sounds enabling/disabling).
- 3 Tap  to confirm and return to the previous page.

SET THE MEASUREMENT UNITS

To change the measurement units:

- 1 On the homepage, tap  >  >  > .
- 2 Tap the measurement unit you prefer.
- 3 Tap  to confirm and return to the previous page.

CONNECT TO A NETWORK

If you connect through an Ethernet cable, in most cases the sterilizer will connect to the network automatically. If it does not connect automatically, or if you are using a Wi-Fi dongle key, follow the procedure below under supervision of your IT manager / network administrator.

- 1 On the homepage, tap  >  > .
- 2 If the connection is through the Ethernet cable, tap : the TCP/IP screen appears.
- 3 If the connection is through the Wi-Fi dongle key, tap : after a while, the sterilizer shows the available networks found. Choose the network, enter the credentials in the following screen, then tap  to confirm: the TCP/IP screen appears.

Note: the  and  icons are disabled if the connectivity means (cable or Wi-Fi dongle key) are not properly plugged.

Note: in the TCP/IP screen, the  icon is visible only if you make any change. The Wi-Fi icon at the bottom isn't visible if you connect through Ethernet cable.

- 4 If your network supports dynamic IP addresses (ask your IT manager), enable the options **Dynamic** both in **IP Configuration** and in the **DNS Configuration** fields, then tap  to confirm: all entry fields are disabled.
- 5 If your network does not support dynamic IP addresses (ask your IT manager), enable the options **Static** both in **IP Configuration** and in the **DNS Configuration** fields. Tap on each entry field and enter the IP addresses (ask your IT manager for details). Then tap  to confirm.

ioDent

DESCRIPTION

It allows to save the data securely and automatically on the cloud and it ensures intelligent and networked reprocessing of instruments, with a wide selection of smart solutions and options.

ACCESS TO IODENT

For the ioDent access proceed as follows:

- 1 On the homepage, tap  >  >  > .

Note: for more information see the dedicated documentation .

User authentication

PIN MANAGEMENT

PIN “0000” is assigned as default to each new user. It has to be changed at the first login. When the PIN is reset the default value “0000” is reassigned.

CHANGE YOUR PIN

Change your PIN the first time you use the sterilizer and if your PIN has been reset. This will prevent other users from accessing your account.

- 1 On the homepage, tap  >  > .
- 2 Tap your user name.
- 3 Enter your current PIN and tap  to confirm.
- 4 Tap .
- 5 Enter your new PIN and tap  to confirm: a confirmation message with your new PIN appears.
- 6 Tap  and then  to return to the previous page.

WHAT TO DO IF YOU FORGET YOUR PIN

If...	Then...
you are a common user	contact the administrator
you are the administrator	contact your authorized service provider

EliTrace

DESCRIPTION

EliTrace allows to know exactly which instruments were sterilized and link them to a specific cycle.

ACCESS TO ELITRACE

For the EliTrace access proceed as follows:

1 On the homepage tap  >  > .

Note: for more information see the dedicated documentation.

Set the EliSense system

THE ELISENSE SYSTEM

The EliSense system permits the touch screen LEDs to turn on in different colours and mode to signal the cycle status, the load temperature and the presence of a new message/pop-up on the sterilizer screen.

TOUCH SCREEN LED STATUS

Status	Description
Visual cycle status	
Moving green	Cycle program in progress
Fixed green	Cycle program ended
Moving red	Cycle error in progress
Fixed red	Cycle error or manual stop
Visual load temperature*	
Blinking blue	Less than 40 °C {104 °F}
Blinking yellow	From 40 °C to 60 °C {from 104 °F to 140 °F}

Status	Description
Blinking orange	More than 60 °C {140 °F}
Various	
Blinking white	Attention messages with active message/pop-up
Blinking yellow	
Moving white	Suggestion/tips and messages (static, maintenance and confirmation)

Note*: the LEDs are active only when the sterilizer door is open.

SET THE OPTIONS OF THE TOUCH SCREEN LEDS

To set the information that the LEDs will show, proceed as follows:

1 On the homepage tap  >  > .

2 To activate an option, tap .

3 To deactivate an option, tap .

4 Tap  to confirm and go back to the previous page.

SET THE POP-UP AND MESSAGES

To set the pop-up and messages, proceed as follows:

- 1 On the homepage tap  >  > .
- 2 To activate an option, tap .
- 3 To deactivate an option, tap .
- 4 Tap  to confirm and go back to the previous page.

USB pen drive

DESCRIPTION

A USB pen drive is available to be installed in order to automatically record all the sterilization cycle reports. The USB pen drive can be inserted equally into the front or rear port.

Notice: periodically remove the USB pen drive to save the cycle data on a computer or on another safe support.

FORMAT THE USB PEN DRIVE

- 1 Insert the USB pen drive in one USB port.
- 2 On the homepage, tap  >  > .
- 3 Tap .
- 4 Tap  to confirm: all data will be erased.
- 5 Tap  to confirm and return to the previous page.

Notice: formatting erases all data from the pen drive. Be sure you have already saved your data on a safe support before formatting.

Standby mode

DESCRIPTION

When in Standby mode, the sterilizer display remains dark and the sterilizer chamber is not heated to save energy. If the device is not used for a certain period of time, it automatically switches to Standby mode.

ENTER THE STANDBY MODE MANUALLY

- 1 Homepage
- 2 Tap .

EXIT THE STANDBY MODE

Tap  or open or close the chamber door.

CHANGING STANDBY MODE DELAY TIME

- 1 On the homepage, tap  >  >  > .
- 2 Tap  or  to change the delay time.
- 3 Tap  to confirm and return to the previous page.

Administrator

CONTENTS

This section deals with the following subjects:

User management	41
Traceability options	42
Hide/Unhide a cycle	42

User management

WHO CAN MANAGE USERS AND RESET THEIR PIN

Only a user with administrator rights can create and delete users and reset the PIN code of a user to "0000".

ADD A USER

- 1 On the homepage, tap  >  > .
- 2 Tap your user name.
- 3 Enter the PIN and tap  to confirm.
- 4 Tap .
- 5 Tap the text box: a keyboard appears.

- 6 Enter the new user name and tap  to confirm.
- 7 If desired, tap ☐ to give the administrator authority to the new user.
- 8 Tap  to confirm: the PIN of the new user is set to "0000" and a confirmation message appears.
- 9 Tap  and then  to return to the previous page.
- 10 Tap  to return to the homepage.

DELETE A USER

- 1 On the homepage, tap  >  > .
- 2 Tap your user name.
- 3 Enter the PIN and tap  to confirm.
- 4 Tap .
- 5 Tap the user name you want to delete.
- 6 Tap  to confirm.

RESET A USER PIN

- 1 On the homepage, tap  >  > .
- 2 Tap your user name.
- 3 Enter the PIN and tap  to confirm.
- 4 Tap  and the user name for which you want to reset the PIN.
- 5 Tap  to confirm: the PIN is set to "0000" and a confirmation message appears.
- 6 Tap  to return to the homepage.

Note: remember the user to change its PIN before reusing the device ( >  > ).

Traceability options

WHO CAN SET THE TRACEABILITY OPTIONS

Only a user with administrator rights can set the traceability options.

SET THE TRACEABILITY OPTIONS

- 1 On the homepage, tap  >  > .
- 2 Tap your user name.
- 3 Enter your PIN and tap  to confirm.
- 4 Tap the information to be requested to the users at the beginning and at the end of the cycle.
- 5 If you want the user to check the load and release it as valid at the end of the cycle, tap ☐.
- 6 Tap  to confirm and return to the previous page.

Hide/Unhide a cycle

WHO CAN HIDE/UNHIDE A CYCLE

Only a user with administrator rights can hide a cycle or make it available to users on the homepage.

HIDE/UNHIDE A CYCLE

- 1** On the homepage tap  >  >  > .
- 2** Tap your user name.
- 3** Enter your PIN and tap  to confirm.
- 4** Tap  to hide a cycle from the homepage.
- 5** Tap  to unhide a cycle from the homepage.
- 6** Tap  to confirm and return to the previous page.

Managing printers

CONTENTS

This section deals with the following subjects:

Printer selection (optional)	44
Label printer selection (optional)	44
Label printer usage (optional)	45
Label content description	47

Printer selection (optional)

SELECT THE PRINTER

Note: the sterilizer only supports the specific printer models available through the manufacturer/distributor.

- 1 On the homepage, tap  >  > .
- 2 Tap the model of the printer to use.
- 3 Tap  to confirm and return to the previous page.

Label printer selection (optional)

FUNCTION AVAILABILITY

The first time you access the **Label Printer**  menu, you will be requested to enter an activation code. To require the activation code, please refer to the activation code instructions provided with the label printer.

LABEL PRINTER SETUP

Labels can be printed by a local label printer or (only with a LAN connection set) a shared label printer. The local label printer is connected to the sterilizer, while the shared label printer is connected to another sterilizer in the network.

SELECT AND CALIBRATE A LOCAL LABEL PRINTER

- 1 On the homepage, tap  >  > .
- 2 Tap : the local printer is located automatically.
- 3 Tap  to center the printout properly in the label area.
- 4 Tap  to print a test label.
- 5 If the printout is not duly centered, tap  or  to center it horizontally {x} and vertically {y}.
- 6 If necessary, tap  to print another test label and repeat step 5.
- 7 Tap  to confirm the settings and return to the previous page.

SELECT A SHARED LABEL PRINTER

- 1 Ensure the sterilizer to which the printer is physically connected is ON and no cycle is running.
 - 2 From that sterilizer, tap  > > > .
- Note:** do not switch OFF the sterilizer until the whole procedure is complete.
- 3 Depending on the LAN connection, take note of the Ethernet or Wi-Fi IP address.

- 4 From the sterilizer to which the printer is not physically connected, tap homepage >  >  > .
- 5 Tap .
- 6 Tap the text box and enter the IP address previously noted.
- 7 Tap  to confirm.
- 8 From the sterilizer to which the printer is connected, confirm the printer sharing.
- 9 Tap  again to print a test label.

Label printer usage (optional)



CAUTION! For your safety and the safety of your patients use a storage time compliant with the recommendations of the manufacturers of the containers/packaging used, and with applicable norms and rules.

FUNCTION AVAILABILITY

The first time you access the **Label Printer**  menu, you will be requested to enter an activation code. To require the activation code, please refer to the activation code instructions provided with the label printer.

AUTOMATIC PRINTING OPTION

The automatic printing option permits to automatically print a preset number of labels after a successful sterilization cycle. The labels are

printed only after the user has identified him/herself (with password if required) and the load has been checked and released, if these options have been enabled by the administrator.

For the automatic label printing, a maximum storage time in weeks can be set. This value is used to calculate the expiry date to be printed on the labels (see "Label content description" on the next page).

SET THE AUTOMATIC LABEL PRINTING

- 1 On the homepage, tap  >  > .
- 2 Activate **Automatic printing**.
- 3 Tap  or  to set the maximum storage time and the number of labels to be printed automatically.
- 4 Tap  to confirm and return to the previous page.

SET THE MANUAL LABEL PRINTING

The manual printing option permits the user at the beginning of a sterilization cycle to set manually the number of labels to print.

- 1 On the homepage, tap  >  > .
- 2 Activate **Manual printing**.
- 3 Tap  to confirm and return to the previous page.


DISABLE THE LABEL PRINTING

If the label printing is disabled, no label can be printed at the end of a sterilization cycle.

- 1 On the homepage, tap  >  > .
- 2 Activate **Disabled**.
- 3 Tap  to confirm and return to the previous page.

Label content description

STRUCTURE

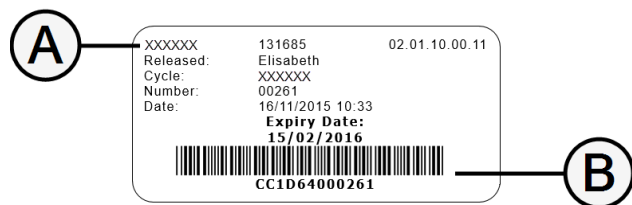

Part	Description
A	■ Sterilizer model ■ Serial number ■ Software release
B	Traceability code (alphanumeric and bar code)
Released	Depending on the traceability settings, this field may contain one of the following elements: ■ the user who released the cycle ■ the user who started the cycle ■ the sterilizer ID
Cycle	Cycle name
Number	Cycle number
Date	Date and time of cycle start
Expiry date	■ Expiry date of the bag/package. ■ The cycle outcome if a storage time is not set.

Device tests

CONTENTS

This section deals with the following subjects:

Device performance tests	48
Bowie and Dick test	49
Helix Test	52
Vacuum Test	55

Device performance tests

TESTS THAT CAN BE PERFORMED ON THE DEVICE

Test	Purpose	Reference
Bowie and Dick test	Validate the sterilizer performance for textile load sterilization	See "Bowie and Dick test" on the next page
Helix Test	Validate the sterilizer performance for hollow items	See "Helix Test" on page 52
Vacuum Test	Validate the sterilizer performance in terms of: ■ efficiency of the vacuum pump ■ tightness of the pneumatic circuit	See "Vacuum Test" on page 55

Bowie and Dick test



CAUTION! Follow local/national guidelines on the frequency of testing.

PURPOSE OF THE TEST

The test is used to validate the sterilizer performance for textile load sterilization.

DESCRIPTION


It consists of several sheets of paper wrapped in a small packet with a chemical heat-sensitive indicator sheet in the middle. The colour assumed by this indicator sheet at the end of the sterilization cycle gives the result of the test.

CARRY OUT THE TEST

Note: carry out the test according to the local Regulations.

Note: to take advantage of the traceability benefits, a W&H test must be used.



- 1** On the homepage, tap **Helix/B&D Test**.
- 2** Tap  to see an animated description of the test steps.
- 3** Empty the sterilization chamber to ensure no load is present. Remove all trays from the sterilization chamber, except the lowest one.
- 4** *Optional:* scan the QR code of the B&D test pack and tap  to confirm the scanned test (only with QR code / Bar code reader for labels connected).
- 5** Place the B&D test pack in the center of a tray in the lowest rack position and close the chamber door.

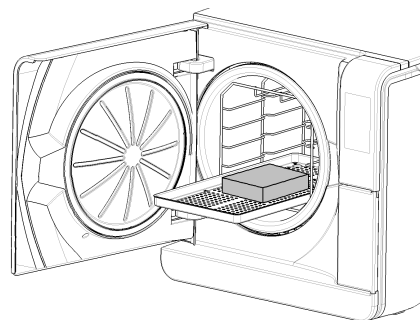

- 6 To set the duration of the Plateau/Sterilization phase and other settings, tap .
 - 7 Tap  and enter your credentials if required: the chamber door locks. If you have not set a different start time (see "Set the sterilization cycle start" on page 61), the test starts immediately.
 - 8 Wait until the end of the test and tap **OPEN**: the chamber door unlocks.
 - 9 Enter your credentials if required.
 - 10 Open the chamber door, extract the tray using the tray holder and take the test pack. The test pack can be wet outside.
-  **CAUTION!** Risk of burns. The test pack is very hot at the end of the cycle. Wear appropriate PPE (e.g. gloves).
- 11 Remove the indicator sheet from the center of the test pack and check the change in colour. See "Interpret the test result" on the next page.
 - 12 *Optional:* to validate the result, scan the QR code on the test sheet (only with QR code / Bar code reader for labels connected); the test report is saved in the HTML file.

Note: for more information on test traceability, see the dedicated documentation.

INTERPRET THE TEST RESULT

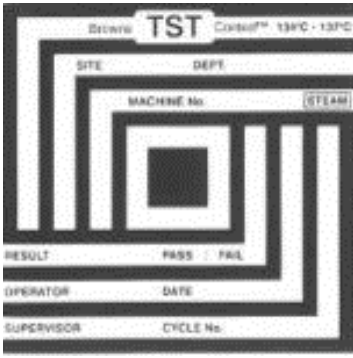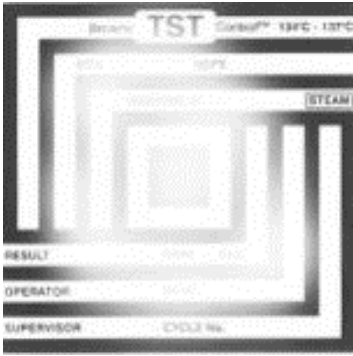Indicator	What happened	Test passed	What to do next
 The image shows a TST indicator strip with a central square and concentric lines. The entire strip is black, indicating a successful sterilization cycle. The text on the strip includes: 'Branch TST Control™ 134°C - 137°C', 'SITE', 'DEPT', 'MACHINE No.', 'STEAM', 'RESULT', 'PASS', 'FAIL', 'OPERATOR', 'DATE', 'SUPERVISOR', and 'CYCLE No.'.	The entire surface of the indicator sheet has changed colour.	Yes	-
 The image shows a TST indicator strip with a central square and concentric lines. The strip is mostly black, but there is a distinct white square in the center, indicating a failed sterilization cycle due to an air pocket. The text on the strip includes: 'Branch TST Control™ 134°C - 137°C', 'SITE', 'DEPT', 'MACHINE No.', 'STEAM', 'RESULT', 'PASS', 'FAIL', 'OPERATOR', 'DATE', 'SUPERVISOR', and 'CYCLE No.'.	Certain areas of the indicator sheet have not changed colour since there was an air pocket during the cycle due to sterilizer malfunction.	No	Repeat the test. If it fails repeatedly, contact technical service.

Helix Test



CAUTION! Follow local/national guidelines on the frequency of testing.

PURPOSE OF THE TEST

The test is used to validate the sterilizer performance for hollow items.

DESCRIPTION


It consists of a 1.5 m long tube open on one side and closed with a capsule containing a chemical indicator strip on the other side. The colour assumed by this indicator strip at the end of the sterilization cycle gives the result of the test.

CARRY OUT THE TEST

Note: carry out the test according to the local Regulations.

Note: to take advantage of the traceability benefits, a W&H test must be used.

- 1** On the homepage, tap **Helix/B&D Test**.
- 2** Tap  to see an animated description of the test steps.
- 3** Empty the sterilization chamber to ensure no load is present. Remove all trays from the sterilization chamber, except the lowest one.
- 4** *Optional:* scan the QR code of the Helix strip (and additionally the QR code of the Helix PCD) and tap  to confirm the scanned strip/PCD (only with QR code / Bar code reader for labels connected).
- 5** Unscrew the tube capsule and place inside it an indicator strip according to the instructions of the test manufacturer.
- 6** Screw the capsule.

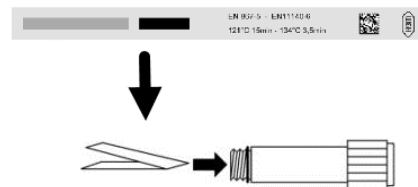


- 7** Place the tube with the capsule in the center of a tray in the lowest rack position and close the chamber door.
- 8** To set the duration of the Plateau/Sterilization phase and other settings, tap .
- 9** Tap  and enter your credentials if required: the chamber door locks. If you have not set a different start time (see "Set the sterilization cycle start" on page 61), the test starts immediately.
- 10** Wait until the end of the test and tap **OPEN**: the chamber door unlocks.
- 11** Enter your credentials if required.
- 12** Open the chamber door, extract the tray using the tray holder and take the tube.



CAUTION! Risk of burns. The tube is very hot at the end of the cycle. Wear appropriate PPE (e.g. gloves).

- 13** Unscrew the tube capsule and remove the indicator strip.
- 14** Check the change in colour. See "Interpret the test result" on the next page.
- 15** *Optional:* to validate the result, tap . To invalidate the test result tap  or scan the strip QR code; the test report is saved in the HTML file.

Note: for more information on test traceability, see the dedicated documentation.

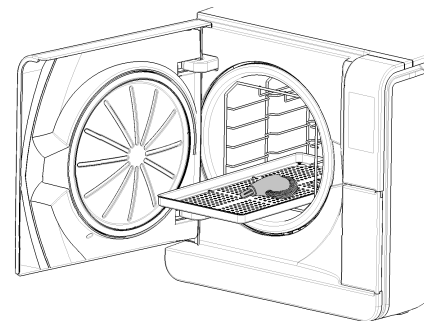

INTERPRET THE TEST RESULT

Indicator	What happened	Test passed	What to do next
	The indicator strip has changed colour. The air was completely removed from the capsule.	Yes	-
	Part of the indicator strip has not changed colour. The air removal from the capsule was not complete.	No	Repeat the test. If it fails repeatedly, contact technical service.
	The indicator strip has not changed colour. The air has not been removed from the capsule.	No	Repeat the test. If it fails repeatedly, contact technical service.

WHAT TO DO NEXT

Compile the Helix Test documentation form to trace the effectiveness of the sterilization cycle during the whole lifespan of your sterilizer. See "Helix Test documentation form" on page 134.

Vacuum Test



CAUTION! Follow local/national guidelines on the frequency of testing.

Notice: if a drainage period of the S Fast 134 cycle is still operating, wait the drainage to be finished and the sterilizer to be both cold and dry. Otherwise, a false negative outcome could occur.

PURPOSE OF THE TEST

The test is used to validate the sterilizer performance in terms of:

- efficiency of the vacuum pump.
- tightness of the pneumatic circuit.

DESCRIPTION

It consists of a vacuum phase, followed by a stabilization period of 5 minutes and a testing period of 10 minutes. The internal pressure is monitored during the testing period. The pressure rise must be less than 0.013 bar (0.19 psi).

CARRY OUT THE TEST

- 1** Empty the sterilization chamber to ensure no load is present.
- 2** Close the chamber door and ensure the sterilization chamber is completely dry and cold to avoid any false negative outcome.

- 3** On the homepage, tap **Vacuum Test**.
- 4** Tap  to see an animated description of the test steps.
- 5** Tap  and enter your credentials if required: the chamber door locks. If you have not set a different start time (see "Set the sterilization cycle start" on page 61), the test starts immediately.
- 6** Wait until the end of the test and tap **OPEN**: the chamber door unlocks.
- 7** Enter your credentials if required: a message informs if the test passed or failed. If the test failed, see "What to do when the test failed" below.

WHAT TO DO WHEN THE TEST FAILED

- 1** Check, clean or replace the door gasket (see "Ordinary maintenance" on page 71).
- 2** Clean the chamber face side and the chamber filter (see "Ordinary maintenance" on page 71).
- 3** Repeat the Vacuum Test. See "Carry out the test" on the previous page.
- 4** If the test fails repeatedly, contact technical service.

Sterilization cycles

CONTENTS

This section deals with the following subjects:

Load maintenance and preparation	57
Prepare the sterilizer	59
Sterilization cycle description	60
Sterilization cycle management	61
Unloading	65
Sterilization cycle report	65

Load maintenance and preparation

WARNINGS



WARNING! Any residual of chemicals (like cleaning and disinfection products), could affect the purity of the steam and consequently the whole sterilization process. If necessary, the load shall be cleaned and lubricated in accordance with the instrument manufacturer's instructions.

Notice: any residual of chemicals could seriously damage the sterilizer. The manufacturer's warranty is void in case of damage caused by chemicals.

DENTAL HANDPIECE EXTERNAL DISINFECTION

This procedure reduces the risk of infection during cleaning and maintenance of the dental handpieces.

- Wear protective gloves during disinfection.
- Avoid using abrasive disinfectants (pH-value 2.5 – 9; no chlorine based disinfectants).
- Use disinfectant wipes rather than spray disinfection.
- Do not immerse handpieces in disinfectants.
- Residual disinfectants on handpieces can cause extensive damage to your instrumentation during sterilization (oxidation, alteration of technical characteristics of seals, rubbers, fiber optics, etc.).

DENTAL HANDPIECE EXTERNAL CLEANING

This procedure involves the removal of residues (blood, dentine, etc.) that adhere to critical areas such as spray outlets, light ports, knurling etc.

- Wear protective gloves during cleaning.
- Refer to the instructions of the instrument manufacturer.
- Use a soft, damp brush and take care not to scratch the surface of the light ports.

DENTAL HANDPIECE LUBRICATION

Once the dental handpieces have been cleaned, disinfected and dried (free from residues), they must be lubricated prior to sterilization. Follow manufacturer's instructions for proper lubrication.

PACKAGING

In order to preserve sterility, rotating instruments should be wrapped/bagged prior to sterilization. Follow the manufacturer's packing instructions when using sterilization packaging.

CLEANING THE INSTRUMENTS

Clean all instruments thoroughly prior to sterilization. If possible, clean instruments immediately after use; always follow the instrument manufacturer's instructions. Remove all traces of disinfectants and detergents. Rinse and dry carefully all instruments.

The instruments and tubes must be carefully rinsed and dried prior to sterilization.

CORRECT LOAD PLACEMENT



WARNING! Do not overload trays and the chamber. Adhere to the maximum load weight limits (see "Sterilization cycles" on page 111). Never place the load or the trays directly into the chamber without the chamber rack as this could affect the steam and temperature distribution. The load must always be supported by the chamber rack. Risk of burns. Before touching, ensure the sterilization chamber is cold.




Wrap items with porous wrapping materials to facilitate steam penetration and drying (e.g. sterilization bags for autoclaves).



WARNING! Always use the chamber rack. Failing to use the chamber rack can damage the unit and could affect adequate steam circulation.


Follow these requirements:

Load type	Placement
Hinged instruments (e.g., forceps, extraction pliers, etc.)	In open position.
Tubes	Place tubes on a tray allowing the ends to remain open. Do not bend tubes.

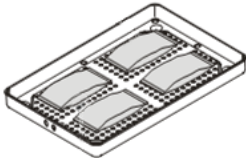Load type	Placement
Cassettes	Cassettes can be placed vertically or horizontally into the chamber rack (vertical placement enhances drying). When placing cassettes horizontally, slide them into the rack position without putting them on trays (if size allows) to enhance drying. When sterilizing double-decker cassettes, place them in the lowest rack position as there is more space height-wise.
Pouched items	On trays allowing adequate space in-between bags. Ensure that packs do not touch the walls of the chamber. Place sterilization pouched items with the paper side facing up. 
Empty containers or non-perforated trays	Upside down to prevent accumulation of water.
Items made from different materials (stainless steel, carbon steel, aluminium, etc.)	On separate trays or wrapped/pouched.
Instruments manufactured from carbon steel	Place paper among them and the trays to avoid rusty spots.
Chemical indicator and Helix strip/s	For more information see the dedicated documentation.

PARTIAL LOAD

If the chamber is only partially loaded, place the load in such a way that the space in-between the trays is maximized. Spread items evenly on multiple trays. Below is an example with five trays.

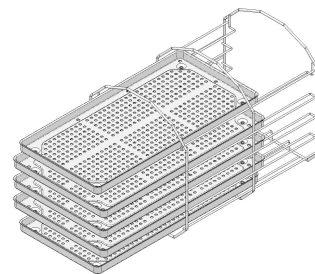

Prepare the sterilizer

WARNINGS

Notice: use only distilled or demineralized water (see "Feed water specifications (EN 13060)" on page 122 for technical requirements). Do not add any chemical / additive to the water.

FILLING THE CLEAN WATER TANK

- 1 Switch the sterilizer ON and remove the tank filling cover-cap.
- 2 Fill the clean water tank with distilled or demineralized water until the sterilizer makes a sound. See "Technical data" on page 118 for the tank volume.
- 3 Reposition the tank filling cover-cap.

INSERTING THE CHAMBER RACK INTO THE STERILIZER



CAUTION! Risk of burns. Before touching the chamber rack or contents, ensure the sterilization chamber is not hot.

- 1 Open the chamber door and align the chamber rack at the center/bottom of the chamber.
- 2 Push the chamber rack gently into position until it clicks into place.
- 3 Insert cassettes horizontally or vertically, or insert trays. See "Load maintenance and preparation" on page 57 for load requirements and "Chamber accessories" on page 24.
- 4 Close the door.
- 5 Turn the sterilizer ON: after the initialization the homepage appears.

GENERAL RECOMMENDATIONS

Follow these recommendations to obtain the most from the drying:

- Ensure the paper side of the sterilization bags faces up, and that the space in-between bags is enough.

- To enjoy the full benefit of short cycle times when only one tray is used, always place the load on the upper tray of the chamber rack and remove all other trays from the chamber.

Sterilization cycle description

AVAILABLE STERILIZATION CYCLES

See "Sterilization cycles" on page 111 for the full list of key program features, including sterilization time, temperature and recommended load type.

AVAILABLE ECO DRY MODES

Icon	Mode	Description
	ECO DRY plus	The drying time is automatically adjusted to the shortest possible for the total amount of load: the smaller the load, the faster the cycle. It ensures perfect drying of standard loads.
	ECO DRY	The drying time is automatically adjusted to the total amount of load. It is longer than the ECO DRY plus mode. It is useful with those particular loads that require an extended drying time (suggested for container load).
	ECO DRY +25%	The drying time is automatically adjusted to the total amount of load with a 25% of additional drying duration.
	ECO DRY +50%	The drying time is adjusted to the total amount of load with a 50% of additional drying duration.

Sterilization cycle management

RUN A STERILIZATION CYCLE IMMEDIATELY

- 1 On the homepage, tap the desired cycle.
- 2 Check the cycle requirements.
- 3 Check the icon in the top left corner of the page to know the ECO DRY mode assigned to the cycle.
- 4 Tap  :
 - to change the ECO DRY mode (see "Change the ECO DRY mode" on page 63).
 - to disable the ECO DRY mode (see "Set the drying time" on the next page).
- 5 If the door gasket is new, hold the door gently closed until step 7.
- 6 Tap  and enter your credentials if required: the door locks. If you have not set a different start time, the sterilization starts immediately.
- 7 Wait for the end of the sterilization. Tap  to view the cycle parameters in real time. See "View the cycle parameters" on page 63.
- 8 The sterilization is completed. Tap  to view the cycle summary or tap  to view the cycle information. See "View the cycle parameters" on page 63.

9 Tap **OPEN**: the door unlocks.

- 10 If required, enter your credentials and confirm the release of the load.

Note: the load release is possible only if the cycle is completed successfully.

Note: the user visually checks that pouches are intact and dry. It is even possible to identify the user who releases the load, accepts the cycle plateau time and cycle minimum temperature.

Note: during the load release it is also possible to accept or reject the chemical indicator and Helix strip results (for more information see the dedicated documentation).

SET THE STERILIZATION CYCLE START

You may schedule the start of the sterilization cycles at a certain date and time (e.g., if you want to load the sterilizer in the evening and run standard sterilization cycle early the next morning before office hours). You can set the cycle start date and time and enable or disable it for each cycle.

- 1 On the homepage, tap the cycle and .
- 2 To change the start time, tap **Start cycle at**.
- 3 Tap the time or the date: a settings page opens.
- 4 Tap the number you want to change and tap  or  to increase it or decrease it.

5 Tap  to confirm and return to the previous page. This date and time become the scheduled default start time for all next sterilization cycles.

6 Tap  to lock the door; a new page appears.

Note: if nothing else is pressed, the cycle will start at the programmed time. The page allows also to start the cycle immediately ("Start now") or to delete the operation and the programmed cycle ("Stop").

PROGRAM A SEQUENCE OF CYCLES TO RUN AUTOMATICALLY

It is possible to program the sterilizer in such a way that a sequence of cycles runs automatically at a preset date and time (e.g. if you want to run a Vacuum Test plus a Helix Test in the early morning before office hours). A maximum of two cycles can be programmed.

To program the sterilizer proceed as follows:

- 1** Load the chamber and close the chamber door.
- 2** On the homepage, tap  >  >  > .
- 3** Tap  to add a cycle to the list above.
- 4** Tap  and then the cycle you want to add.
- 5** Tap : the cycle is automatically listed in the previous page.
- 6** Tap the date/time to set the start of the cycle.
- 7** Tap the number you want to change and tap  or  to increase it or decrease it.

8 Tap  to confirm and return to the previous page.

9 Repeat steps from 3 to 7 to add another cycle to the sequence.

10 Tap  to launch the programmed sequence.

DELETE A CYCLE FROM A PROGRAMMED SEQUENCE

1 On the homepage, tap  >  >  > .

2 Tap the cycle you want to remove from the sequence.

3 Tap  to remove the selected cycle.

4 Tap  to confirm and return to the previous page.

SET THE DRYING TIME

For each ECO DRY mode, the drying time is automatically adjusted to the total amount of load and cannot be modified. To set a new drying time for the program, you should disabled the ECO DRY mode first.

1 On the homepage, tap the cycle and .

2 Select **Fixed** to disable the ECO DRY mode.

3 Tap **Fixed** to modify the fixed mode minutes.

4 Tap  or  to increase the minutes or decrease them.

Note: for the minimum value of the drying time for each cycle see "Sterilization cycles" on page 111.

- 5 Tap < to confirm and return to the previous page. This becomes the new fixed value.

CHANGE THE ECO DRY MODE

- 1 On the homepage, tap the cycle and .
- 2 Tap the leaf icon to set the ECO DRY mode.
- 3 Tap the ECO DRY mode you desire.
- 4 Tap < to confirm and return to the previous page.


VIEW THE CYCLE PARAMETERS

You can check the real-time cycle parameters or the cycle parameters at the end of the cycle. Following is an example:

- 1 While the sterilization cycle is running or when cycle ends tap  : the cycle information page opens.
- 2 Tap < or > to scroll the pages.

STERILIZATION CYCLE PAGE

Following are the information displayed while a cycle is running:

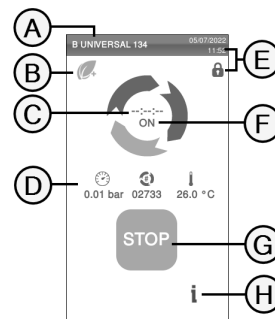

Part	Description
A	Sterilization cycle name
B	ECO DRY mode enabled
C	Countdown clock (time until the cycle completion)
D	 : chamber pressure  : cycle counter  : chamber temperature
E	Date and time and door securely locked symbol
F	Current cycle phase
G	Stop button
H	Button to open the cycle information page

END OF A STERILIZATION CYCLE

At the end of the S Fast 134 cycle, the sterilizer could perform two drainage periods of about 30 seconds each and the message "Draining" is displayed.


When a cycle is successfully finished, the "Cycle completed" message appears on the screen. To end the cycle:

- 1 Tap  to view the cycle summary or tap  to view the cycle parameters. See "View the cycle parameters" on the previous page.
- 2 Tap **OPEN** to open the door: the door unlocks and the home page appears.

Note: if an error message appears see "Troubleshooting" on page 99



CAUTION! Hot surfaces. Burnings. Do not touch the chamber, the internal side of the door and the internal fittings. Use the tray holder or cassette holder or gloves for high temperatures or adequate protection to remove the load!

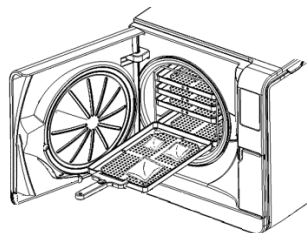

- 3 Open the chamber door.
- 4 Remove the load and stock it.

STOP A STERILIZATION CYCLE



WARNING! You can stop the cycle at any time. Instruments must not be considered sterile if this occurs before the **DRY** phase.

A cycle can be manually aborted at any time. To stop a cycle:

- 1 Tap **STOP**: a confirmation request appears.
- 2 Tap  to abort the stop command. The cycle continues as programmed.
- 3 Tap  to abort the cycle: the sterilizer starts a reset phase.

Notice: do not switch off the sterilizer during the reset phase: it takes some time to reset the system and reach safe conditions in the sterilizer chamber.

- 4 Check the message. See "Messages of a stopped sterilization cycle" on the next page.
- 5 Tap  to view the cycle parameters. See "View the cycle parameters" on the previous page.
- 6 Open the chamber door.
- 7 Reprocess the load if necessary.



CAUTION! Hot steam. Wait the steam to dissipate before opening the door.

Note: water could be present in the chamber when opening the door. To prevent spilling place a towel below the chamber door.

MESSAGES OF A STOPPED STERILIZATION CYCLE

The following are the messages:

- Load not sterile: Do not use items on patients!
- Drying interrupted: The load might be wet. Wet items are for immediate use only!

Unloading

WARNINGS



CAUTION! Risk of burns. Before touching, ensure the sterilization chamber is cold. Always use the tray holder.

Sterilization cycle report

WHERE CYCLE DATA ARE STORED

The sterilizer stores in its memory the summarized reports of the last 400 cycles and the analytical reports of the last 50 cycles. All reports can also be saved on the USB pen drive or in a specific remote folder in the network if the sterilizer is connected to a LAN .

STORED REPORT FORMAT

The summarized reports are stored in HTML format and the analytical reports in SCL format. All parameters are recorded every second.

WHAT HAPPENS WITH UNSAVED CYCLES

If for any reason (e.g. USB memory full, USB pen drive disconnected, etc.) some cycles cannot be saved, no alert is shown. If still stored in memory, the unsaved cycles will be copied to a working USB pen drive connected to the sterilizer as soon as a new cycle starts.

VIEW CYCLE HISTORY

To view the sterilization cycle history:

- 1** On the homepage, tap > > : all the sterilization cycles are listed with number, date, time and sterilization program. The sterilization cycle interrupted due to a cycle error or problem appears in red.
- 2** Scroll the list and tap the desired sterilization cycle: the report opens.

PRINT OR SAVE A CYCLE REPORT ON THE USB PEN DRIVE

- 1** On the homepage, tap > > .
- 2** Scroll the list and tap the desired sterilization cycle: the report opens.
- 3** Tap
- 4** Tap to print the report, or tap to save the report on the USB pen drive.

PRINT LABELS FOR A SPECIFIC CYCLE

Note: function available only with the Label printer activation code.

- 1 On the homepage, tap  >  > .
- 2 Scroll the list and tap the desired sterilization cycle: the report opens.
- 3 Tap
- 4 Tap  to print traceability labels for the selected cycle.
- 5 Tap  or  to increase or decrease the number of label to be printed.
- 6 Tap ☐ to save the set number for the next time.
- 7 Tap ☒ to print the labels required.

SAVE ALL THE CYCLE REPORTS ON THE USB PEN DRIVE

The number of reports that can be saved on the USB pen drive depends on upon the USB capacity. To save all the cycle reports:

- 1 On the homepage, tap  >  > .
- 2 Tap  : after the confirmation all sterilization cycle reports are stored in the USB.

SET THE REMOTE FOLDER FOR SAVING THE REPORTS

To activate the remote storage and set the necessary parameters proceed as follows:

- 1 On the homepage, tap  >  >  > .
- 2 Tap  to enable the remote data storage: the first four fields in the page and the check box turn dark grey.
- 3 In **Path** enter the name of the shared folder followed by the sub-folder name, if any, where to save reports. Do not enter the full path.

Note: The folder name must include letters and numbers only. Do not use other characters like space-bar, slash, accent, etc.

- 4 Enter the host name or the IP address: if the data are complete, the fields highlight.
- 5 Not mandatory. Enter the domain name.
- 6 Tap ☐ to require the authentication credentials to access the remote storage folder and enter the username and password.
- 7 Tap  to save.
- 8 Tap  to return to the previous page.
- 9 To check if the parameters entered are valid, see "Test the data storage " on the next page.

TEST THE DATA STORAGE

Note: the test function is available only if the remote data storage is enabled. See "Set the remote folder for saving the reports" on the previous page.

- 1 On the homepage, tap  >  > .
- 2 Tap : a sequence of tests is automatically performed.
- 3 If a test fails, check the relevant settings and tap  to repeat the test sequence. If the error persists, contact your IT manager.
- 4 Tap  to return to the previous page.

SAVE ALL THE CYCLE REPORTS IN A REMOTE FOLDER

Note: the save all function is available only if the remote data storage is enabled. See "Set the remote folder for saving the reports" on the previous page.

Only the last 400 cycles in HTML and 50 cycles in SCL in the sterilizer memory can be saved in the remote folder.

- 1 On the homepage, tap  >  >  > .
- 2 Tap  to start the remote saving.

CYCLE REPORT STRUCTURE

Following is the structure of a cycle report:

W&H Sterilization

XXXXXXXXXX SN: XXXXXX

Software rev.: 005.026
 Sterilizer name: XXXXXX
 Cycle: B UNIVERSAL.134
 Number: 01910
 Sterilizat. temp.: 134.0 °C
 Sterilizat. time: 04:00

Date: 30/03/2023 06:29:29

Phase	Time	Partial	T °C	P bar
START	00:00	00:00	57.6	-0.02
PV1	01:50	01:50	57.8	-0.87
PP1	02:50	01:00	105.7	0.40
PV2	03:33	00:43	78.1	-0.85
PP2	04:36	01:03	109.1	0.41
PV3	05:23	00:47	82.8	-0.85
PPH	09:24	04:01	134.1	2.05
PRS	09:24	00:00	134.1	2.05
MIN	00:48	135.2	----	----
MAX	01:17	135.9	----	----
MIN	00:31	----	2.11	----
MAX	01:18	----	2.19	----
PRE	13:24	04:00	135.6	2.16
DVS	13:24	00:00	135.6	2.16
D01	00:21	121.9	0.98	----
D02	01:36	103.3	-0.51	----
D03	02:01	96.2	-0.02	----
DVE	18:24	05:00	83.3	-0.93
SEP	19:09	00:45	86.4	-0.16
LEV	19:32	00:23	86.0	-0.02
END	19:32	00:00	86.0	-0.02

H2O: 350 cm³
 F0: 121
 H2O conduct.: 6.6 µS/cm

Cycle time: 19:32
 Date: 30/03/2023 06:49:01
 Cycle completed

Cycle Validation Summary

Plateau time:	04:00	Accepted
Min. temperature:	135.2°C	Accepted
Chemical indicator:		Pass
HelixStrip:		Pass
ID:	+004AVM006DI/	

Trk: CC2478301910

Data	Description
A	Sterilizer model
SN	Sterilizer serial number
Software rev.	Software revision number
Sterilizer Name	Surgery – practice – doctor name
Cycle	Name of the executed cycle
Number	Cycle counter
Sterilizat. temp.	Programmed sterilization temperature
Sterilizat. time	Programmed Plateau/Sterilization
Date	Cycle start date and time
START	Cycle start
PV1, PP1, PV2, PP2, PV3, PP3	Pressure and vacuum pulses
PPH	Phase of pressure rise to sterilization conditions
PRS	Plateau/Sterilization phase start: - MIN, MAX temperature - MIN, MAX pressure
PRE	Plateau/Sterilization phase end
DVS	Drying phase start
DVE	Drying phase end
SEP	Chamber venting phase
LEV	Pressure leveling phase

Data	Description
END	Cycle end conditions
H2O	Cycle water consumption
F0	F0 value
H2O conductivity	Cycle water conductivity
Cycle time	Cycle time
Date (below)	Cycle end date and time
"Cycle completed"	Cycle outcome
Cycle Validation Summary	Cycle validation (you can choose to accept or reject the results): ■ Plateau time ■ Min. temperature ■ Chemical indicator ■ Helix strip/s
Trk.	Tracking code for traceability management

Maintenance

CONTENTS

This section deals with the following subjects:

Warnings for maintenance operations	70
Ordinary maintenance	71
50-cycle or monthly maintenance	73
400-cycle maintenance	79
800-cycle or biannual maintenance	82
800-cycle maintenance	89
4000-cycle or five-year maintenance	91
Extraordinary maintenance	92
Disposal	93

Warnings for maintenance operations

WARNINGS



WARNING! Turn the sterilizer OFF and remove the mains cable before beginning any maintenance. Follow all health, safety, cross-infection and cross-contamination protocols.

Maintenance operation shall be done at illumination level of 215 lx (± 15 lx) to 1500 lx (± 15 lx).

Before making any operation, ward off unauthorized personnel from the working area.



CAUTION! Before accessing the chamber and the connected parts, be sure that the sterilizer is cold.

Notice: follow the instructions in this chapter when carrying out any maintenance on the sterilizer.

Ordinary maintenance

MAINTENANCE BY THE USER

Frequency ¹	Cycles ¹	Operation
Monthly	50	Cleaning the door gasket and the chamber face side. See "Cleaning the door gasket and the chamber face side" on page 73. Clean the chamber, trays and the rack. See "Cleaning the chamber and the chamber accessories" on page 74. Cleaning the chamber filter. See "Cleaning the chamber filter" on page 75. Cleaning the external surfaces of the sterilizer. See "Cleaning the external surfaces of the sterilizer" on page 78.
6 month	800	Clean both water tanks. See "800- cycle or biannual maintenance" on page 82.
Yearly ²	400 ²	Replace the bacteriological filter. See "400-cycle maintenance" on page 79. Replace the dust filter. See "400- cycle maintenance" on page 79
Yearly ²	800 ²	Replace the door gaskets. See "800- cycle maintenance" on page 89.
5 years	4000	General check and service. See "4000-cycle or five-year maintenance" on page 91.

¹: whichever occurs first.

²: even if the maximum cycle number is not reached, it is recommended to replace the consumable parts every year, or if they appear worn or

damaged, or if the filters are clogged or discolored.

*: optional.

EXPIRED MAINTENANCE

The sterilizer monitors the wear of consumables by counting the number of cycles executed since the last replacement.

When the number of cycles is close to the maximum, a pre-alert about the concerned consumable is displayed. Please check that you have the requested spare part available, buy one if not. When the maximum number of cycles has been met, a message to replace the consumable will be displayed.

If you can not replace the consumable immediately, the sterilizer will operate anyway but the message will appear again some cycles later.

- 1 Tap  to see an animated replacement procedure.
- 2 When you have replaced the consumable tap  to confirm: the executed cycle counter is reset.

REPLACE THE CONSUMABLE BEFORE THE MAINTENANCE DUE DATE

If you replace the consumables before the request of replacement appears, you should manually reset the counters through the following procedure.

- 1 On the homepage, tap  > 
- 2 Select the consumable you want to replace: a message appears showing the current worked hours of the part.
- 3 Tap  to see an animated replacement procedure.
- 4 When you have replaced the consumable tap  to confirm: the executed cycle counter is reset.

50-cycle or monthly maintenance

CLEANING THE DOOR GASKET AND THE CHAMBER FACE SIDE


Proceed as follows:

- 1 Clean the gasket seat and the chamber face side with a damp, lint-free cloth moistened with clean water.

Notice: do not use abrasive products, cutting tools or sharp objects.

- 2 Rinse with clean water.

Note: when the seal is new it might be necessary to hold the door gently closed at the sterilization start.

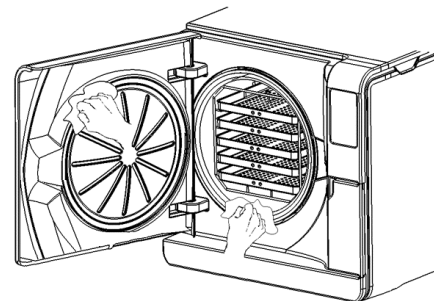


CLEANING THE CHAMBER AND THE CHAMBER ACCESSORIES

Proceed as follows:

- 1** Remove the trays and the chamber rack.
- 2** Clean the chamber with a damp sponge and a mild detergent solution paying attention not to bend or damage the temperature probe inside the sterilizer chamber.
- 3** Rinse with water.
- 4** Clean the trays and the chamber rack with a damp sponge and a mild detergent solution.
- 5** Rinse with water.
- 6** Reposition all pieces of the chamber accessories properly.

Note: tap **B** to see the animated cleaning procedure.

Note: the trays and the tray holder may also be cleaned in a washer disinfectant.


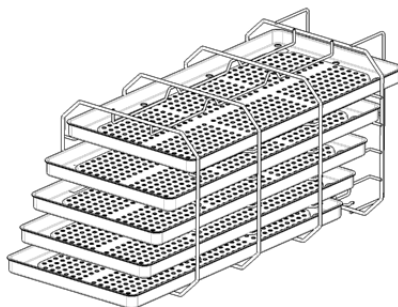


CLEANING THE CHAMBER FILTER


Proceed as follows:

- 1 Allow the sterilization chamber to cool down.
- 2 Empty the sterilizer chamber by removing the trays and the rack.
- 3 Turn the filter cap at the back of the chamber (bottom/center) counter-clockwise.


Note: tap  to see the animated cleaning procedure.

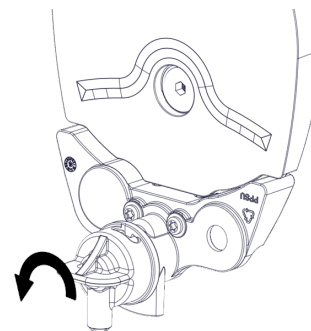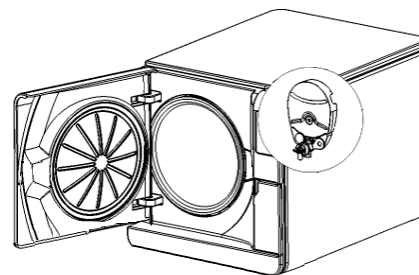


- 4** Remove the filter cap and the cartridge filter.
- 5** Rinse the cartridge filter with tap water.

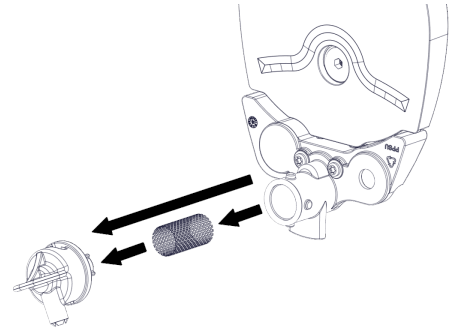


- 6** Insert the cartridge filter in the filter cap.

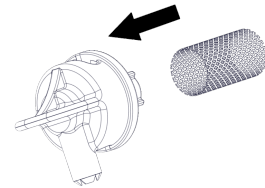

- 7** Insert the filter cap with the cartridge filter in its original position.

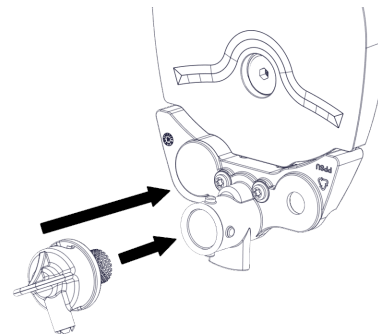

- 8** Lock the filter cap by turning it clockwise.

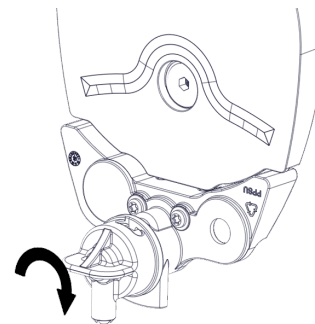

CLEANING THE EXTERNAL SURFACES OF THE STERILIZER

Proceed as follows:

- 1** Clean all external sterilizer covers with a slightly damp cloth moistened with water. For better cleaning results, clean with W&H MC-1000 cleaning solution.
Note: for cleaning operations, do not dilute the W&H MC-1000 cleaning solution.
Notice: never use any other disinfectant, detergent or abrasive product, as they might result aggressive for the tank material.

400-cycle maintenance


REPLACING THE BACTERIOLOGICAL FILTER

Notice: if you replace this consumable before the maintenance due date you have to reset the cycle counter. See "Replace the consumable before the maintenance due date" on page 72.

Proceed as follows:

- 1** Open the service door.
- 2** Unscrew the bacteriological filter by hand (counter-clockwise).
- 3** Screw on the new bacteriological filter (clockwise) and tighten it snug.

Note: tap  to see the animated replacement procedure.

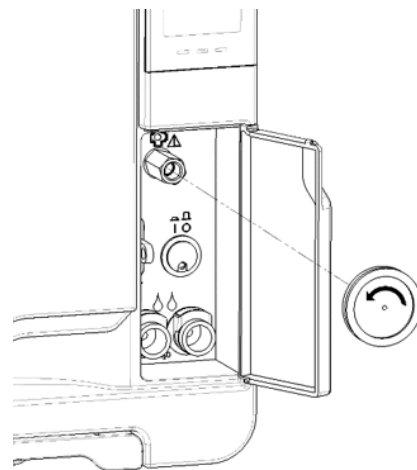


REPLACING THE DUST FILTER

Notice: if you replace this consumable before the maintenance due date you have to reset the cycle counter. See "Replace the consumable before the maintenance due date" on page 72.


Proceed as follows:

- 1** Pull out the dust filter handle from underneath the sterilizer.


Note: tap  to see the animated replacement procedure.

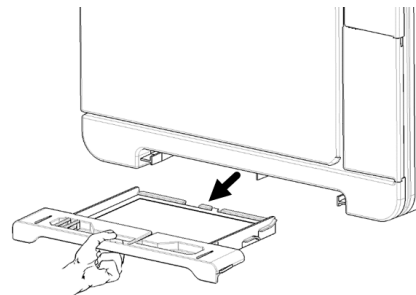


- 2** Lift the used filter from the handle and remove it.

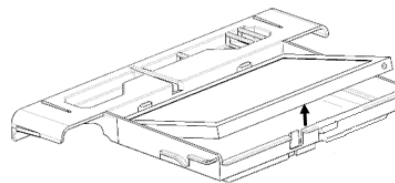

- 3** Insert the new filter into the handle.

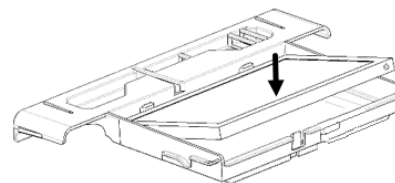

- 4** Slide the handle back into its original position.

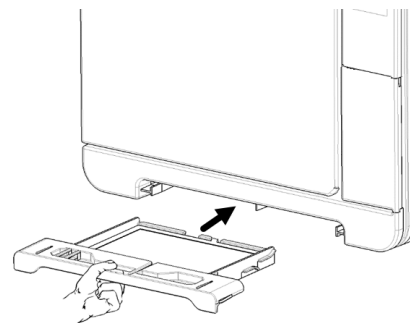

800-cycle or biannual maintenance

SEQUENCE OF PROCEDURES TO CLEAN THE WATER TANKS

To clean the water tanks, proceed as follows:


- 1** "Prepare the sterilizer for cleaning the water tanks" on the next page.
- 2** "Access to the water tanks" on page 84.
- 3** "Clean the water tanks" on page 86.

Note: tap  to see the animated cleaning procedure.

PREPARE THE STERILIZER FOR CLEANING THE WATER TANKS

Proceed as follows:


- 1** Switch OFF the sterilizer and disconnect the mains cable.
- 2** Completely drain both water tanks (see "Draining the used and clean water tank" on page 92).
- 3** To drain the detergent solution during the subsequent cleaning, leave the drain tube attached to the drain connection of the tank you want to clean.

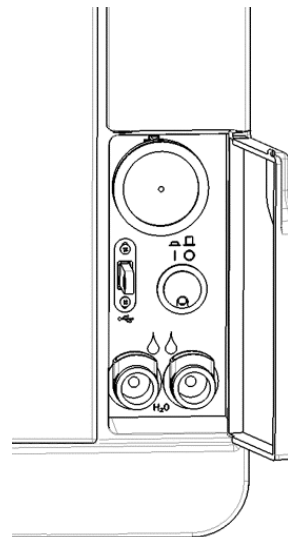

ACCESS TO THE WATER TANKS


Proceed as follows:

- 1 Lift the water tank cover.

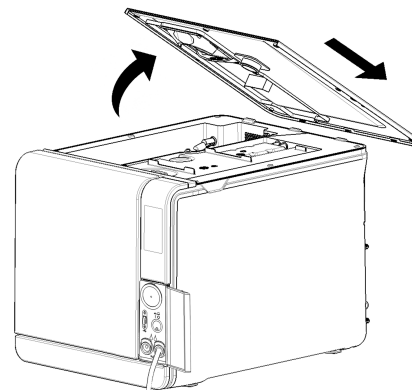

- 2** Remove the internal tank cover.
- 3** Clean and dry the internal tank cover and its rubber membrane to eliminate any condensate.

Notice: never use disinfectants, strong detergents or abrasive products. Use a slightly damp cloth moistened with water.

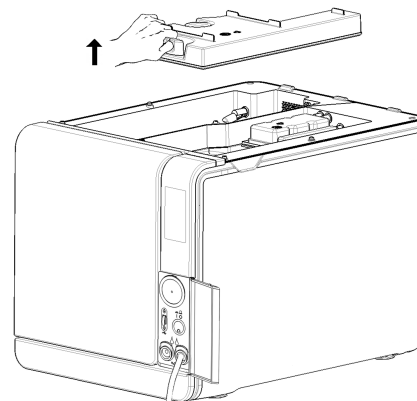


CLEAN THE WATER TANKS


Notice: Do not touch the water level sensors. If misplaced or misaligned from their original position, the operation of the sterilizer could be impaired.

Proceed as follows:

- 1** Clean the internal tank surfaces with a soft sponge moistened with water. For better cleaning results, clean with W&H MC-1000 cleaning solution. Use a small non-abrasive brush to clean the areas that are difficult to reach.
Note: for cleaning operations, do not dilute the W&H MC-1000 cleaning solution.
Notice: never use any other disinfectant, detergent or abrasive product, as they might result aggressive for the tank material.
- 2** Rinse the internal tank surfaces thoroughly, until all residuals of dirt and detergent have been eliminated.
- 3** Dry the internal tank surfaces.
- 4** Detach the drain tube, attach it to the drain connection of the other tank and repeat steps 1, 2, 3.

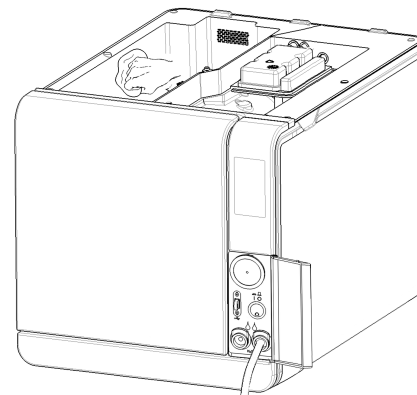


- 5** Remove the internal filters.
- 6** Clean the metal cartridges of the internal filters with tap water.
- 7** Reposition the internal filters.

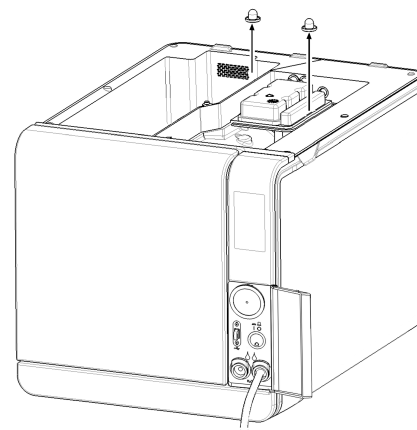

8 Reposition the internal tank cover and then the water tank cover.

9 Detach the drain tube.

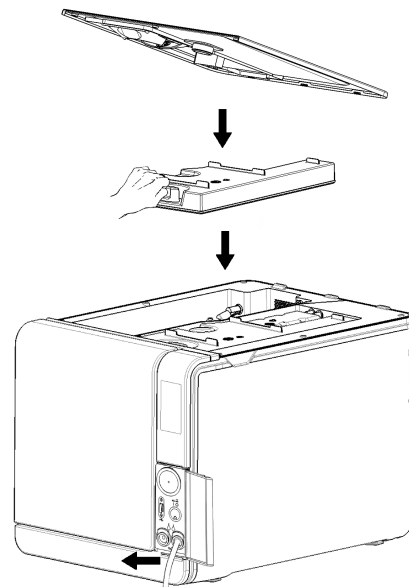

800-cycle maintenance


REPLACING THE DOOR GASKET

Notice: if you replace this consumable before the maintenance due date you have to reset the cycle counter. See "Replace the consumable before the maintenance due date" on page 72.


Proceed as follows:

- 1** Fully open the chamber door.
- 2** Remove the used door gasket by hand.
- 3** Carefully clean the gasket seat and the chamber face side with a damp, lint-free cloth.
- 4** Moisten the new gasket with water to facilitate its placement.

Note: tap  to see the animated replacement procedure.

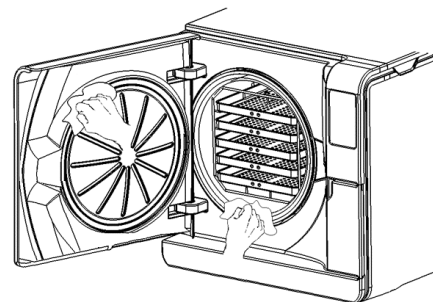


- 5** Insert the new gasket and press first up and down.

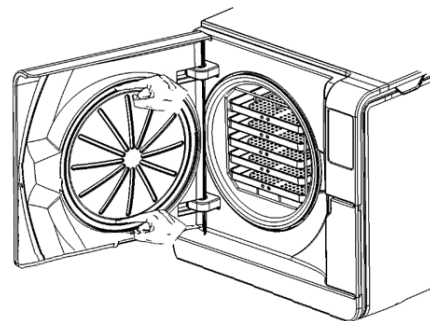

- 6** Press left and right and then the entire gasket circumference to ensure its perfect placement.

Notice: a steam discharge can damage the sterilizer plastic parts. Ensure the gasket does not stick out.

- 7** Wipe any residual water and run a Vacuum and Helix test to check for perfect tightness of the gasket. See "Vacuum Test" on page 55 and "Helix Test" on page 52.

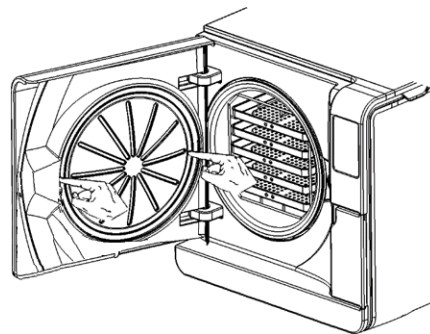

4000-cycle or five-year maintenance

GENERAL CHECK AND SERVICE REQUIRED

Notice: regular service is imperative to ensure continuous and effective operation of the sterilizer.

A general check and service should be carried out every 4000 cycles or five years by an authorized service technician. The service required includes the following:

- the replacement of consumables and other important internal components
- a check of the entire sterilizer with special care for the safety systems
- the cleaning of areas and components that cannot be accessed by the user.

ACTIONS REQUIRED FOR EACH ELEMENT

For each element, the actions to be carried out are the following:

Element	Replace	Clean	Check
Electro valves	x	-	-
Vacuum pump internal parts	x	-	-
Sterilization chamber and external surfaces	-	x	-
Chamber filter	-	x	-


Element	Replace	Clean	Check
Internal parts, with particular care for the condenser fins and the main board	-	x	-
Pneumatic connections	-	-	x
Electrical connections	-	-	x
Temperature and pressure calibration	-	-	x
Door locking system	-	-	x
Pressure safety valve	-	-	x
Safety systems	-	-	x

Extraordinary maintenance

DRAINING THE USED AND CLEAN WATER TANK

If you left accidentally the tanks full for more than seven days or if you plan not to use the sterilizer for at least seven days, you have to drain the tanks.

- 1** Open the sterilizer service door.
- 2** Put a container below the sterilizer (5 l (1.3 gal) minimum) and place the end of the drain tube in it.
- 3** To drain the used water, insert the drain tube connector in the grey connection.
- 4** To drain the clean water, insert the drain tube connector in the blue connection.
- 5** When the water has been completely drained, press the release button to remove the drain tube and close the service door.

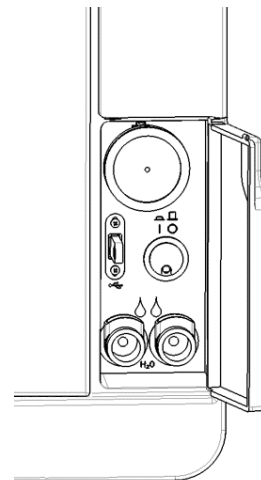

Disposal

DISPOSAL RESPONSIBILITY



- Separate the various components according to the materials they are made of
- Drop the sterilizer with a company that specializes in the recycling of related products
- Do not abandon the sterilizer in unsecured places
- Always refer to current/applicable laws and rules in the country of use

The same instructions apply to disposal of all used consumable parts.

MATERIALS

The sterilizer is mainly built from fiber-reinforced polymers, metals and electric / electronic components.

Diagnostics

CONTENTS

This section deals with the following subjects:

Errors	94
Troubleshooting	99
Emergency door opening	107

Errors

CHECKS AND ACTIONS

Notice: for any error not listed in this table, contact technical service.

Note: the errors listed in this table do not involve any potential risk for the user.

Code	Category	Description	Actions
0xx	Power supply	Load cannot be considered sterile. See "End of a sterilization cycle" on page 63.	Repeat the cycle. If the problem persists, contact technical service.
		Check if the mains switch or network circuit breaker is OFF.	
		Check if the mains cable is properly connected.	
		Switch the sterilizer OFF and ON.	
		Set date and time, then switch the sterilizer OFF and ON.	
		Check the dust filter and ensure that the sterilizer fan is not blocked.	
10x	Pressure	See error "13x to 16x" on the next page.	Repeat the cycle. If the problem persists, contact technical service.

Code	Category	Description	Actions
12x	Pressure	Wait before opening the chamber door. Allow the sterilization chamber to cool down. See error "13x to 16x" below.	Repeat the cycle. If the problem persists, contact technical service.
13x to 16x	Sterilization process	Switch the sterilizer OFF and ON.	Repeat the cycle. If the problem persists, contact technical service.
		Clean the door gasket and the chamber face side.	
		Check if the load placed in the sterilization chamber complies with the MAXIMUM WEIGHT LIMITS.	
		Clean the chamber and the chamber furniture from residuals of detergents, disinfectants and other chemicals.	
		Replace the clean water if it is suspected to be contaminated with chemicals.	
		Ensure all the load is clean rinsed and free from any chemicals before sterilizing.	
		Start a Vacuum Test to check the tightness of the pneumatic circuit.	
18x	Filter/s	Chamber filter clogged. Remove and clean the chamber filter. See error "13x to 16x" above.	Repeat the cycle. If the problem persists, contact technical service.
		Bacteriological filter clogged. Check and replace if necessary.	
19x	Air detector	Air detected in chamber. Clean the door gasket and the chamber face side.	Repeat the cycle. If the problem persists, contact technical service.
		Cycle temperature detection error.	
2xx	Steam generator and heating element/s	Switch the sterilizer OFF.	Repeat the cycle. If the problem persists, contact technical service.
		Wait for the chamber to cool down. Reset the safety thermostat (see "Extraordinary maintenance" on page 92).	

Code	Category	Description	Actions
3xx	Vacuum	Check the door gasket. Clean or replace it if necessary.	Repeat the cycle. If the problem persists, contact technical service.
		Clean the chamber face side.	
		Clean the chamber filter.	
		Check if chamber filter is properly locked in the cap.	
		Check the load does not exceed the MAXIMUM WEIGHT LIMITS.	
4xx	Water and fan/s	Clean water error (bad quality or low water level). Drain and refill the clean water tank.	Repeat the cycle. If the problem persists, contact technical service.
5xx	Door locking system	Check if there are hurdles on the door locking area (chamber rack, loads, objects, ...).	Repeat the cycle. If the problem persists, contact technical service.
		Check the door gasket (wrong placed).	
		Check if the door can move freely without touching the trays or the load when closing.	
		Switch the sterilizer OFF and ON.	
990	Manual stop	The cycle has been aborted by the user.	Re-process the load.

MESSAGES AND ALERTS

Notice: for any message/alert not listed in this table, contact technical service.

Note: this section describes messages and alerts. Please note that the availability of them depends on the device model and some of them might not be available for this model.

Message/Alert	Description	Action
Fill clean water tank.	There is not enough water in the tank to perform a cycle.	Fill the water tank as requested.
Drain used water tank.	The used water tank is full.	Drain the water tank as requested.
Please close the door.	The door must be locked, but you didn't close it.	Close the door so it can be locked.
Non-conform water	The clean water quality is bad (conductivity between 15 and 50 $\mu\text{S}/\text{cm}$).	You may run a cycle but the water must be replaced soon, otherwise the unit will automatically lock-out to prevent damage.
Unacceptable water.	The clean water quality is very bad (conductivity more than 50 $\mu\text{S}/\text{cm}$).	Running a cycle is inhibited to prevent damage. Replace the clean water.
Door Gasket must be replaced in ... cycles. Have you ordered the Door Gasket?	These are pre-alerts advising that one of the consumables has to be replaced within a small number of cycles.	Tap  if you have the consumable available for replacement. Tap  if you do not have the consumable in stock and must order one. In this case, the pre-alert will appear again after some cycles. See "Maintenance" on page 70.
Bact. Filter must be replaced in ... cycles. Have you ordered the Bact. filter?		
Dust Filter must be replaced in ... cycles. Have you ordered the Dust filter?		

Message/Alert	Description	Action
4000 cycle maintenance must be performed in ... cycles. Have you already booked the 4000 cycle service?	This pre-alert advises you that the target of 4000 cycles is close and the relevant maintenance step is to be scheduled.	Contact technical service.
Door Gasket replacement is due. Have you replaced the door gasket?	These messages advise that one consumable must be replaced.	Replace the consumable and tap  to reset the counter (See "Maintenance" on page 70). If you do not replace the consumable, tap  . In this case, you may still use the sterilizer but the message will appear again after some cycles.  CAUTION! Operating the sterilizer with expired consumables could be dangerous and could damage the sterilizer.
Bact. Filter replacement is due.. Have you replaced the bacteriological filter?		
Dust Filter replacement is due. Have you replaced the dust filter?		
Device has completed 4000 cycles. Please call your technical support to organize service.	This message advises you that the target of 4000 cycles has been achieved and the relevant maintenance step is to be performed.	Contact technical service for the 4000 cycle maintenance.
Possible leak detected. Please run Vacuum Test.	Air was detected in the chamber: a vacuum leak is suspected. The cycle was completed but a Vacuum Test is required.	Run a Vacuum Test. Call for service if an anomaly is detected.
Please check: - Not to overload the sterilizer - Door gasket - Dust filter If the problem persists contact the service.	This message advises you that the pressure inside the chamber did not drop as expected in the first 30 seconds of drying phase.	Check the door gasket and the dust filter correct positioning and make sure do not overload the sterilizer chamber. If the problem persists, contact technical service.
Have you filled the clean water tank?	There is not enough water in the tank.	Fill the water tank as requested.

Troubleshooting

MANAGING ERRORS

If during a sterilization cycle or test an error occurs, proceed as follows:

- 1 Wait until the end of the reset phase.



CAUTION! Do not switch off the sterilizer during the reset phase: it takes some minutes to reset the system and reach safe conditions in the sterilizer chamber.

- 2 When the **OPEN** button appears, tap it to unlock the door.
- 3 Confirm the opening of the door.

Notice: water could be present in the chamber when opening the door: prevent spilling (e.g., place a towel below the chamber door).


VIEW AND SAVE THE ERROR LOG

- 1 On the homepage, tap > > : all the sterilization cycles and tests are listed with number, date, time and sterilization/test program. The sterilization cycle / test interrupted because of a cycle error or problem appears in red.
- 2 Tap the desired cycle or test error/problem: the report opens.
- 3 Tap .
- 4 Tap to save the report in the USB pen drive.

ERROR PAGE

During the sterilization cycle, the sterilizer is continuously monitored by a control system. If an anomaly is detected, the cycle is aborted automatically, and the sterilizer starts a reset phase.

The following page appears:

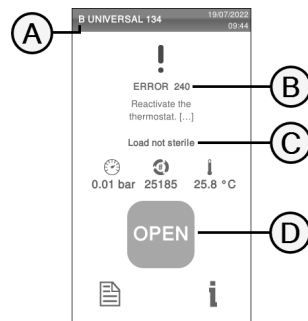

Part	Description
A	Current sterilization cycle
B	Error number, See "Errors" on page 94
C	Warning messages
D	Open button that appears after the reset phase had finished


WARNING MESSAGES

Message	Description
Load not sterile	The load is not sterile.  WARNING! Do not use items on patients!
Drying interrupted	The load might be wet.  WARNING! Wet items are for immediate use only!


RESET THE SAFETY THERMOSTAT

The sterilizer is fitted with a safety thermostat to prevent it from overheating. If the safety thermostat operates because of too high temperatures, the error 240 or a timeout error is displayed. The thermostat must be reset manually. Proceed as follows:


- 1** Switch the sterilizer OFF and remove the mains cable.
- 2** Wait for the sterilizer to cool down.

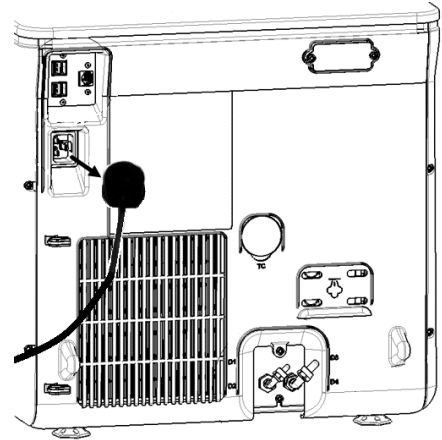


- 3** Remove the dust filter and move the sterilizer closer to the shelf edge.

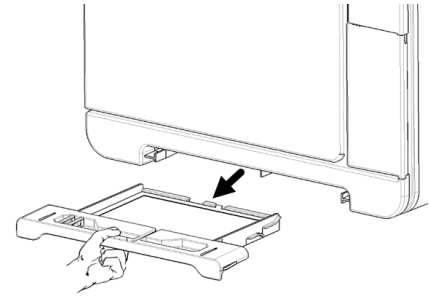

- 4** Push the reset button of the safety thermostat: a click sound indicates that the safety thermostat has been reset.

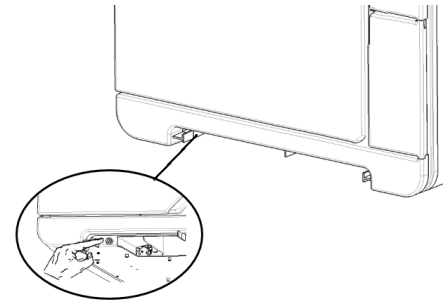


- 5** Insert the dust filter back into its original position.

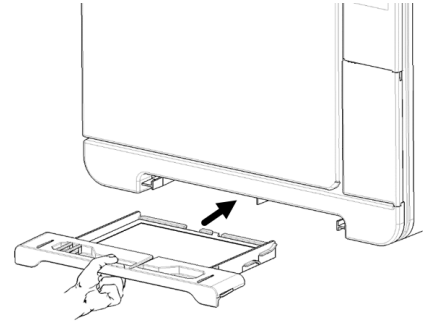

- 6** Connect the mains cable and place the sterilizer back into its original position.
- 7** Switch the sterilizer ON.
- 8** Wait for the sterilizer to finish the error reset phase and follow the instructions on the display.

Note: if the thermostat operates repeatedly, contact technical service.

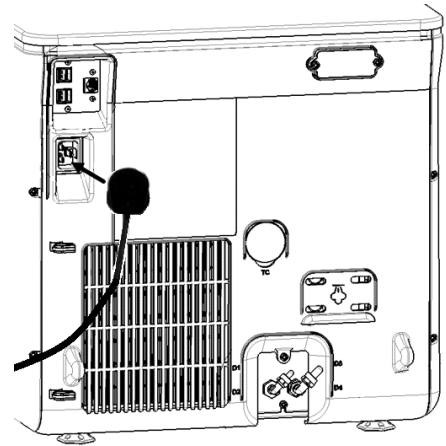

TROUBLESHOOTING TABLE

Note: if your problem is not resolved, call your authorized service provider.

Notice: before sending the sterilizer for technical service, remove the mains cable, empty both water tanks and use the original or appropriate packaging.

Problem	Possible cause	Solutions
The sterilizer remains switched OFF.	The mains switch or network circuit breaker is OFF.	Activate the mains switch or network circuit breaker (ON).
	No voltage at the socket.	Check the electric circuit.
	The power cord is not connected properly.	Check and connect the power cord properly.
Water is leaking at the front of the sterilizer.	Leaks through the chamber door gasket.	Clean or replace the door gasket. Clean the chamber face side.
	Internal leak.	Contact technical service.
The cycle commences but there is no pressure/temperature rise.	The safety thermostat switch is open.	Reset the safety thermostat switch. See "Extraordinary maintenance" on page 92.
	Electric - electronic fault.	Contact technical service.
At the end of the cycle, there is residual water in the chamber.	Sterilizer not properly leveled.	Properly level the surface the sterilizer is placed on.
	Overloaded chamber.	Comply with the maximum load weight limits for each type of load. Always use the chamber rack for trays and cassettes. See "Load maintenance and preparation" on page 57.
	Chamber filter clogged.	Remove and clean the chamber filter.
	Chamber filter cap not well-positioned.	Mount the chamber filter cap properly (see "Ordinary maintenance" on page 71).
	Load incorrectly placed.	See "Load maintenance and preparation" on page 57.

Problem	Possible cause	Solutions
Corrosion or spots on instruments.	Tap water on instruments when placed in the sterilizer.	Ensure that instruments are dry before they are placed in the sterilizer.
	Use of water of poor quality or water containing chemical substances.	Drain both water tanks. Use water of good quality. See "Water quality" on page 122.
	Organic or chemical residues on the instruments.	Clean, rinse and dry instruments before placing them in the sterilizer. See "Load maintenance and preparation" on page 57.
	Chamber, trays, chamber rack dirty.	Clean the chamber and wash the chamber furniture.
	Contact between instruments of different materials.	Ensure that instruments of different materials do not touch (aluminium, carbon or stainless steel, etc.); place them on different trays or cassettes or pouch them. See "Load maintenance and preparation" on page 57.
	Scale deposits on the chamber.	Clean the chamber and use water of good quality. See "Water quality" on page 122.
Instruments are turning brown or black.	Incorrect temperature selected.	Select a sterilization cycle featuring a lower sterilization temperature. Follow the instructions of the instrument manufacturer.
The cycle report printer does not work.	Printer not properly connected or not powered on.	Check the data and the power connection to the printer.
No cycles are stored in the cycle history menu.	An electronic board was replaced by service.	None. The memory of the old board cannot be restored. Save periodically the history on the USB pen drive.
When starting a cycle, the chamber door locks but re-opens immediately. The "Open the door" message appears.	Door gasket not properly placed; seal sticking out.	Ensure that the door gasket is evenly inserted on the entire circumference.
	Door jammed by external objects or by the load itself.	Remove any objects interfering with the chamber door. Check the door does not force against the load or the chamber furniture.

Problem	Possible cause	Solutions
When the sterilizer is connected to an automated water supply system: there is no clean water in the tank, but the automatic water filling does not fill the water.	Water fill system not connected.	Connect the water fill system to the sterilizer. See "Water quality" on page 122.
	When the water fill system attempted to fill the tank, water was temporarily unavailable.	Since water tank filling is attempted only once in-between cycle execution, this event inhibits water feeding. Switch the sterilizer OFF and then ON again. Check the external water supply system. Check for water leaks from the sterilizer.
	Faulty MIN water level sensor in the clean water tank.	Contact service.
The sterilizer enters the standby mode immediately after opening the chamber door.	The chamber door has not been opened after the previous cycle had finished and the standby mode delay has expired.	Press the standby button to exit.
At the end of the cycle the display reads "Open the door" but opening the door is impossible.	The chamber is in vacuum due to an internal malfunction.	Switch the sterilizer OFF: this releases any internal pressures allowing the chamber door to be opened. Contact technical service if the problem persists.
	The bacteriological filter is blocked.	Remove the bacteriological filter to get the pressure released. Replace the filter. Note: the bacteriological filters need to be replaced every 400 cycles.
The sterilization process phase of a sterilization cycle was longer than expected.	The chamber temperature dropped below the minimum threshold and the software performed a successful recovery.	Wait for cycle completion. If the problem occurs frequently, contact technical service.
Warning about USB saving (HTML and SCL files).	The USB pen drive is not connected or not properly connected to the sterilizer.	Check presence and connection of the USB pen drive. If the problem persist, contact service.
Warning about programmed maintenance.	A component shall be replaced for the programmed maintenance of the sterilizer.	Contact service to order the requested component (door gasket, dust filter, bacteriological filter...). See "Ordinary maintenance" on page 71

Emergency door opening

WARNING ABOUT OPENING THE DOOR IN EMERGENCY



WARNING! High pressure. Risk of explosion, jet of hot steam, sudden opening of the door. Carry out the following procedure only if necessary and only when **NO RESIDUAL PRESSURE IS IN THE CHAMBER**. Any attempt to open the door while the unit is still hot or under pressure could expose the operator and the surrounding personnel to serious risk.



CAUTION! High temperature. Risk of burns. Carry out the following procedure only when the sterilizer has completely cooled down. The sterilizer should be unplugged from the mains power supply for at least 3 hours before executing this procedure.

Notice: carry out this procedure only as indicated and with the sterilizer in the indicated conditions. Any attempt to open the door in a different way can seriously damage the sterilizer.

OPENING TOOL

The door locking system is electrically activated. In case the door remains locked due to a black-out or an electric fault, an auxiliary unlocking procedure is available.


For this reason, two 9V batteries size PP3 or 1604 are required.

OPEN THE DOOR IN EMERGENCY


- 1 Unplug the sterilizer and wait at least three hours.



- 2** Extract the dust filter and remove the emergency door opening tool.
- 3** Open the service door.
- 4** Unscrew the bacteriological filter by hand (counter-clockwise).

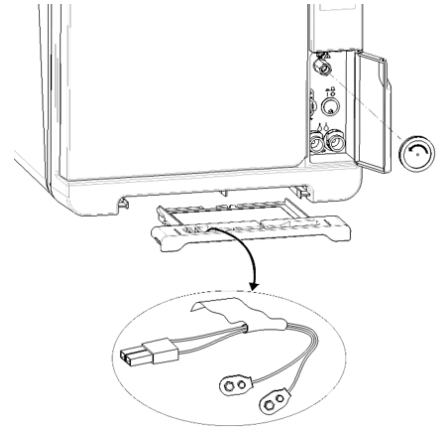

- 4** Plug two batteries into the connectors.
- 5** With the service door open, plug the plastic connector into the socket located behind the bacteriological filter.
- 6** As soon as the door opens, unplug the plastic connector to prevent system overload and consequent damage.
- 7** Put the emergency door opening tool back in the dust filter handle and insert the dust filter in the sterilizer.

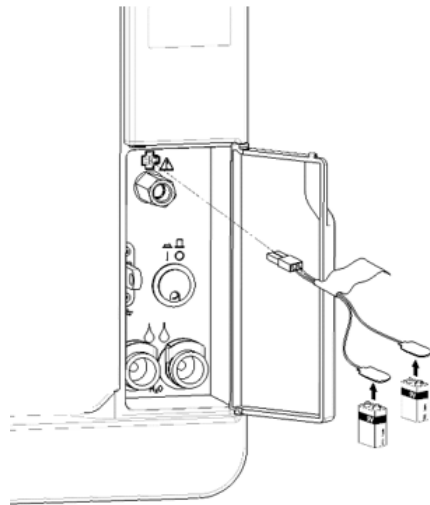

Technical data

CONTENTS

This section deals with the following subjects:

Sterilization cycles	111
Sterilization cycle phases	115
Technical data	118
Recommendations for validation	120
Diagrams	121
Water quality	122
Accessories, spare parts, consumables	123
Authorized W&H service partners	130

Sterilization cycles

WARNINGS

For your safety and for the safety of your patients:



WARNING!

Never process objects different from those specified in the cycle program table and never exceed the maximum load weight limits specified in it as this could impair the sterilization process. Such actions could result in non-sterile conditions at the end of the cycle, could expose people to the hazard of cross-infections, are considered as an improper use of the sterilizer for which the manufacturer cannot be hold responsible.

All indications of sterile load or successful completion of the cycle that are given on the display at the end of the cycle are not valid if the type and quantity of the load are not complied with.

Processing bagged items with the S Fast 134 cycle will result in wet bags/pouches at the end of the cycle, exposing the items to contamination due to improper storage. The display reminds the maximum permitted load before starting a cycle.

Note: S Fast 134 cycle has to be used according to local regulations and for immediate use only.

STANDARD STERILIZATION CYCLES AVAILABLE

There are four sterilization cycles available, all of them complying with the European Standard EN13060:

- three B-type cycles
- one S-type cycle

COMMON STERILIZATION CYCLE DATA

	Sterilization cycles			
	B Universal 134	B Prion / Extended 134 *	B Universal 121**	S Fast 134
Sterilization temperature	134 °C	134 °C	121 °C	134 °C
Sterilization pressure	3.03 bar 2.03 bar (g)	3.03 bar 2.03 bar (g)	2.04 bar 1.04 bar (g)	3.03 bar 2.03 bar (g)
Duration of the Plateau/Sterilization phase	4'	18'30"	20'30"	3'30"
Duration of the drying phase [ECO DRY plus mode]	5'–16'	5'–16'	6'–24'	1'–4'
Minimum duration of the drying phase (set by the user)	16'	16'	24'	4'
Load type	All types of load ¹			Unwrapped items: ■ Solid ■ Hollow B (simple hollow item) ■ Specific load ²
Packaging type	Wrapped and unwrapped			Unwrapped

*: cycle name might be different, depending on country requirements.

**:: for all items that cannot withstand the high temperatures of the 134 cycles, such as textiles and plastics.

¹: the liquids are excluded.

²: "specific load" is intended as a load up to steam penetration grade IIIa in accordance with EN ISO 17665.

TOTAL CYCLE DURATION

The total cycle time includes the drying time and may vary according to different elements, such as the following:

- type of load (solid or porous).
- load weight.
- duration of the drying phase (if the ECO DRY mode is disabled).
- other factors.

	Load					
	Empty		Full		Typical	
	Lisa 17	Lisa 22	Lisa 17	Lisa 22	Lisa 17	Lisa 22
B Universal 134	21'	21'	41'	45'	28'	28'
B Prion / Extended 134 *	36'	36'	57'	61'	43'	43'
B Universal 121**	40'	40'	67'	72'	-	-
S Fast 134	13'	13'	20'	21'	-	-

Note: values and cycle names could be different depending on country requirements.

MAXIMUM LOAD FOR INSTRUMENTS

Note: the load given includes the trays, the containers and everything is put into the chamber, with the sole exclusion of the tray rack.

	Instruments					
	Bagged		Unwrapped		Porous	
	Lisa 17	Lisa 22	Lisa 17	Lisa 22	Lisa 17	Lisa 22
B Universal 134	4.5 kg (10 lbs)	6.0 kg (13.2 lbs)	4.5 kg (10 lbs)	6.0 kg (13.2 lbs)	1.5 kg (3.3 lbs)	2.0 kg (4.4 lbs)
B Prion / Extended 134 *	4.5 kg (10 lbs)	6.0 kg (13.2 lbs)	4.5 kg (10 lbs)	6.0 kg (13.2 lbs)	1.5 kg (3.3 lbs)	2.0 kg (4.4 lbs)
B Universal 121**	4.5 kg (10 lbs)	6.0 kg (13.2 lbs)	4.5 kg (10 lbs)	6.0 kg (13.2 lbs)	1.5 kg (3.3 lbs)	2.0 kg (4.4 lbs)
S Fast 134	-	-	2.0 kg (4.4 lbs)	2.0 kg (4.4 lbs)	-	-

MAXIMUM LOAD FOR CONTAINERS

The correct dryness can only be obtained with the ECO DRY mode.

	Lisa 17	Lisa 22
B Universal 134	9.0 kg (19.8 lbs)	9.0 kg (19.8 lbs)
B Prion / Extended 134 *	9.0 kg (19.8 lbs)	9.0 kg (19.8 lbs)
B Universal 121**	9.0 kg (19.8 lbs)	9.0 kg (19.8 lbs)
S Fast 134	not suitable	not suitable

Sterilization cycle phases


COMMON LEGEND OF THE STERILIZATION CYCLE PHASES

Following is the description of the sterilization phases.

Code	Description
PHE	Pre-heating of the sterilizer. This phase is not considered a part of the cycle.
PV1 - PV3 PV1 - PV6	Vacuum pulse (removal of air from the sterilizer chamber/load).
PP1 - PP2 PP1 - PP5	Pressure pulse (steam generation).
PPH	Rise to the Plateau/Sterilization phase.
PR	Process (Plateau/Sterilization phase).
DRY	Vacuum drying.
SEP	Short phase to clean the circuit from used water.
LEV	Leveling. Pressure inside the sterilization chamber is leveled to the atmospheric pressure.
END	End of the cycle.


B-TYPE STERILIZATION CYCLE PHASES

All B-type sterilization cycles feature the same basic pressure profile as shown in the graph below. The duration and the temperature of the sterilization phase differ between the various cycles.

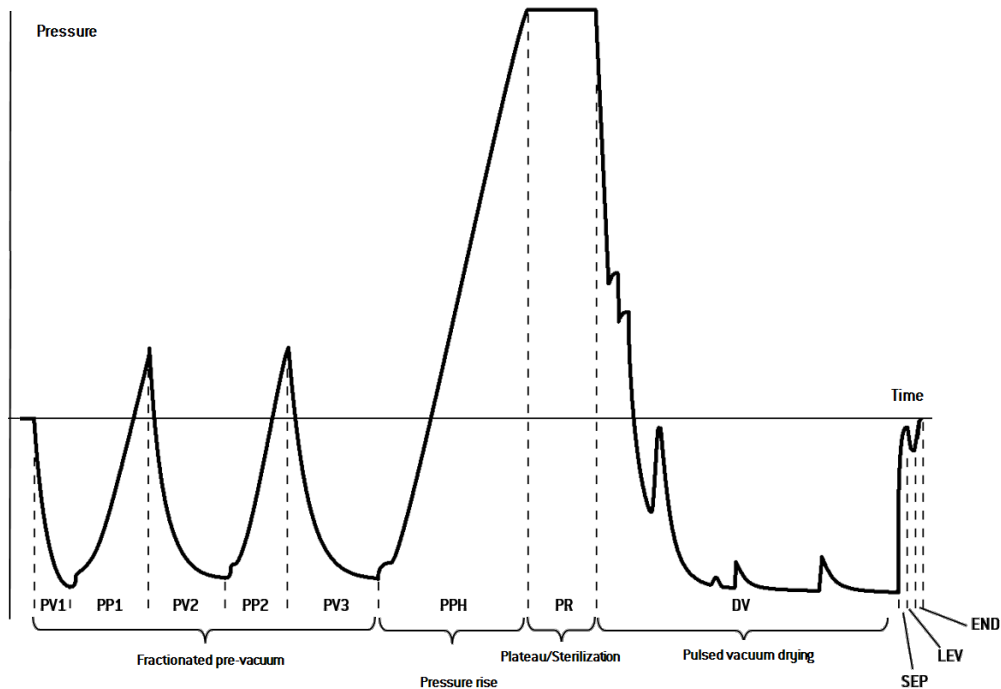

S-TYPE STERILIZATION CYCLE PHASES

The S Fast 134 cycle is specifically designed to sterilize unwrapped instruments, for immediate use on patients, not requiring a complete drying. Thus, the drying phase of this cycle is short, making this cycle the fastest available.

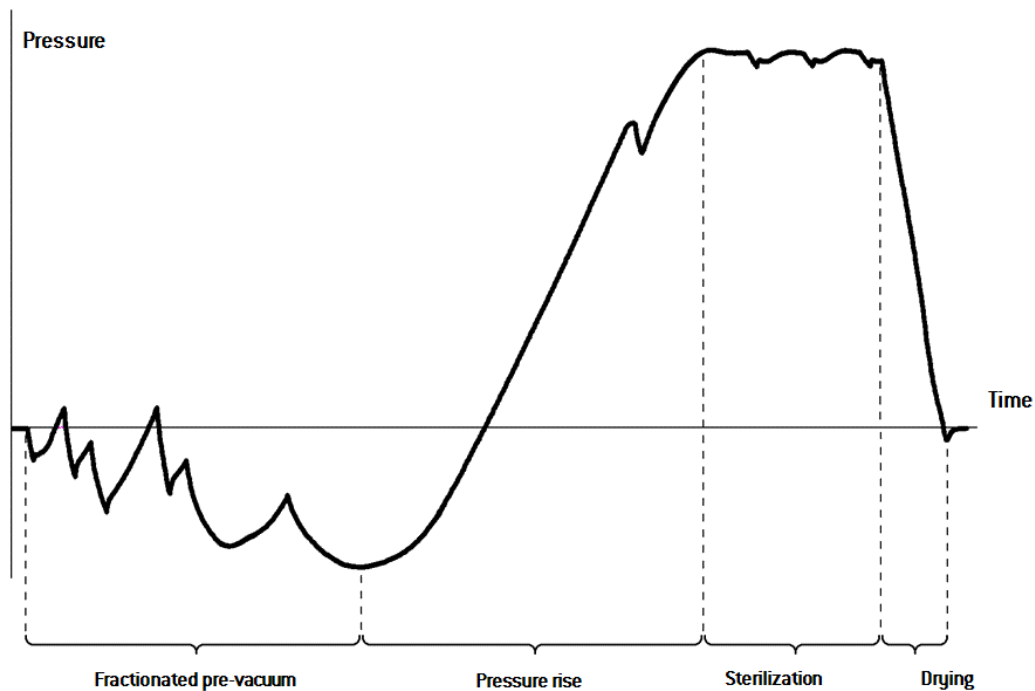

Technical data

WATER SUPPLY SYSTEM

Temperature	max. 35 °C (95 °F)
Pressure	min. 2 bar – max. 8.6 bar [min 29 psi - max. 124.7 psi]
Flow	min. 0.25 – max. 0.5 l/min [min. 0.066 - max. 0.132 gal/min ¹]

POWER SUPPLY SYSTEM

Nominal voltage and Max. current	200–240 V ac (±10%), 50/60 Hz, 10 A, single-phase
Overvoltage category	II
Protection required	Suitable circuit breaker and a Ground Fault Circuit Interrupter (GFCI). All protection devices must be certified according to applicable standard. A grounded connection is essential.
Communication with other devices	5 USB ports - 1 LAN port
Features	Fully micro-processor controlled, process evaluation system according to EN13060. Programmable standby mode.
Max. heat output	3000 kJ/h
Sound pressure level [LpA]	<80 dB(A)
Residual-current device	30 mA or less, if required by local regulations
Automatic circuit breaker [min.]	10 A

INSTALLATION REQUIREMENTS

Working temperature	From +5 °C to +40 °C (from +41 °F to +104 °F)
Working relative humidity	Max. RH 80% up to 31 °C (88 °F), linearly decreasing to 50% at 40 °C (104 °F)
Storage temperature / rel. humidity	From -20 °C to +60 °C (from -4 °F to +140 °F) / 0–90 % [with empty tanks]
Max altitude	3000 m asl (9843 ft)
Min. atmospheric pressure	0.6 bar (8.7 psi)
Overall dimensions	W: 47 cm/H: 45 cm/D: 64 cm (W: 18.30"/H: 17.79"/D: 25.96")
Min. space required (feet in forward position)	W: 49 cm/H: 50 cm/D: 54 cm (W: 19.09"/H: 19.76"/D: 21.18")
Min. space required (feet in rearward position)	W: 49 cm/H: 50 cm/D: 44 cm (W: 19.09"/H: 19.76"/D: 17.28")
Size of the door movement	W: 53 cm/H: 39 cm/D: 36 cm (W: 20.70"/H: 15.23"/D: 13.93")
Weight empty	Lisa 17: 46 kg (101.4 lbs) Lisa 22: 47.5 kg (104.7 lbs)
Max. weight (fully loaded)	Lisa 17: 65 kg (143.3 lbs) Lisa 22: 66.5 kg (146.6 lbs)
Weight per support area	Lisa 17: 38 kN/m ² Lisa 22: 39.2 kN/m ²
Environment pollution	Degree 2
Usage environment	Indoor

STERILIZER CHAMBER

Pressure safety valve	2.6 bar (37.7 psi)
Safety thermostats	180 °C (356 °F)
Total volume	Lisa 17 - 17 l/Ø: 250 mm/D: 362 mm (4.5 gal 1, Ø: 9.8"/D: 14") Lisa 22 - 22 l/Ø: 250 mm/D: 440 mm (5.8 gal 1, Ø: 9.8"/D: 17")
Usable space *	Lisa 17 - W: 190 mm/H: 190 mm/D: 310 mm (W: 7.5"/H: 7.5"/D: 12.2") Lisa 22 - W: 190 mm/H: 190 mm/D: 390 mm (W: 7.5"/H: 7.5"/D: 15.36")
Bacteriological filter	0.3 µm
Air detector system	Present

STEAM GENERATOR

Pressure safety valve	5 bar (72.51 psi)
Safety thermostats	230 °C (446 °F)

DISTILLED OR DEMINERALIZED WATER

Water quality	Fulfilling EN 13060 Ann. C (conductivity: < 15 µS/cm, Total Dissolved Solids: < 10 ppm)
Average water consumption	0.32 to 0.65 litres/cycle (0.08 to 0.17 gal/cycle 1)
Tank volume	Clean water 4.8 l (1.27 gal 1), 2.8 l (0.74 gal 1) with air gap Used water 4.8 l (1.27 gal 1)

*: usable space with standard rack and trays. With optional racks and trays, see "Accessories, spare parts, consumables" on page 123.


1: the unit of measurement used is U.S. liquid gallons.

Recommendations for validation

TEST VALIDATION POINTS

Lisa sterilizers can be validated in accordance to EN ISO 17665.



For further details please refer to the Qualification/Validation guide for sterilization cycles of the manufacturer.

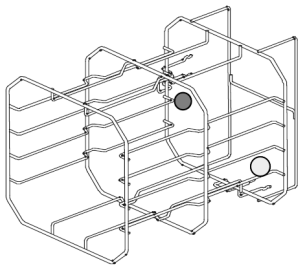

Part	Description
	Hottest points
	Coldest points

Diagrams

CONNECTION DIAGRAMS

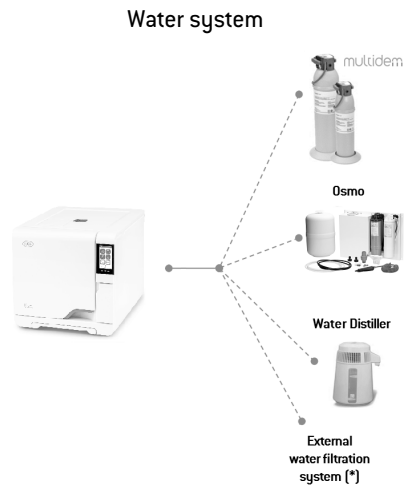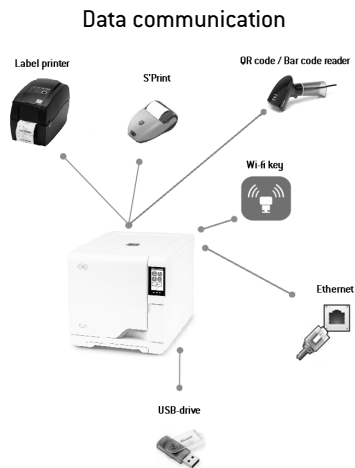

(*): the water filtration system must be fitted with a backflow prevention device complying to IEC 61770 and to national and local regulations.

For water requirements see "Technical data" on page 118.

Water quality

FEED WATER SPECIFICATIONS (EN 13060)

Notice: do not use rust inhibitor or any other agents in the clean water tank.

This sterilizer uses distilled or demineralized water to generate steam for the sterilization process. The table below lists the maximum content of minerals and the specifications for the water used for steam sterilization according to EN13060.

Contaminants/minerals/qualities	Value/Specification
Total Dissolved Solids	< 10 mg/l
Silicon oxide, SiO ₂	< 1 mg/l
Iron	< 0.2 mg/l
Cadmium	< 0.005 mg/l
Lead	< 0.05 mg/l
Heavy metals (excl. iron, cadmium, lead)	< 0.1 mg/l
Chloride	< 2 mg/l
Phosphate	< 0.5 mg/l
Conductivity (at 20°C)	< 15 µS/cm
pH value	5-7
Appearance	colorless, clean, free from sediment

Contaminants/minerals/qualities	Value/Specification
Hardness	< 0.02 mmol/l
Chemical additives	No chemicals or additives must be added to the water used for the steam sterilization process , even if they are specifically claimed for use in steam generators, or for steam production, or as additives for sterilization, disinfection, cleaning or corrosion protection.

Notice:


The use of water with a conductivity greater than 15 µS/cm (10 ppm) may affect the sterilization process and damage the sterilizer. The use of water with a conductivity greater than 50 µS/cm, or not complying with the specifications in the table above, may strongly affect the sterilization process and seriously damage the sterilizer. The manufacturer's warranty is void if the sterilizer was used with water containing contaminant or chemical levels exceeding those listed in the table above.


Accessories, spare parts, consumables


Note: use only accessories, spare parts and consumables recommended by W&H.


Note: before purchasing, check that the accessories fulfill all applicable standards in the country of use.



LIST OF ACCESSORIES AND SPARE PARTS

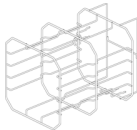
Picture	Part	Part number
	Standard chamber rack for 5 aluminium trays for Lisa 17 Usable space - Tray size (mm): ■ 190 x 21 x 312 ■ 190 x 28 x 312 ■ 190 x 28 x 312 ■ 190 x 28 x 312 ■ 190 x 21 x 312	 F523031X
	Note: rack rotated 90°. Standard chamber rack for 3 cassettes / containers* for Lisa 17 Usable space - Cassette size (mm): ■ 190 x 43 x 312 ■ 190 x 50 x 312 ■ 190 x 43 x 312	 F523031X
	Standard chamber rack for 1 cassette / container for Lisa 17 Usable space - Cassette size (mm): ■ 160 x 160 x 312	 F523031X

 
Picture	Part	Part number
	Standard chamber rack for 5 aluminium trays for Lisa 22 Usable space - Tray size (mm): ■ 190 x 21 x 387 ■ 190 x 28 x 387 ■ 190 x 28 x 387 ■ 190 x 28 x 387 ■ 190 x 21 x 387	F523032X
	Standard chamber rack for 3 cassettes / containers* for Lisa 22 Usable space - Cassette size (mm): ■ 190 x 43 x 387 ■ 190 x 50 x 387 ■ 190 x 43 x 387	
	Standard chamber rack for 1 cassette / container for Lisa 22 Usable space - Cassette size (mm): ■ 160 x 160 x 387	

 
Picture	Part	Part number
	Optional chamber rack for 4 cassettes / containers for Lisa 17 Usable space - Cassette size (mm): ■ 190 x 36 x 300 ■ 210 x 36 x 300 ■ 210 x 36 x 300 ■ 190 x 36 x 300	F523012X
	Optional chamber rack for 1 cassette / container for Lisa 17 Usable space - Cassette size (mm): ■ 140 x 160 x 300	
	Optional chamber rack for 4 cassettes / containers for Lisa 22 Usable space - Cassette size (mm): ■ 190 x 36 x 385 ■ 210 x 36 x 385 ■ 210 x 36 x 385 ■ 190 x 36 x 385	F523015X
	Optional chamber rack for 1 cassette / container for Lisa 22 Usable space - Cassette size (mm): ■ 140 x 160 x 385	




 
Picture	Part		Part number
	Optional chamber rack for 2 cassettes / containers for Lisa 17 Usable space - Cassette size (mm): ■ 190 x 78 x 300 ■ 210 x 78 x 300		F523016X
	Optional chamber rack for 1 cassette / container for Lisa 17 Usable space - Cassette size (mm): ■ 160 x 160 x 300		
	Optional chamber rack for 2 cassettes / containers for Lisa 22 Usable space - Cassette size (mm): ■ 190 x 78 x 385 ■ 210 x 78 x 385		F523017X
	Optional chamber rack for 1 cassette / container for Lisa 22 Usable space - Cassette size (mm): ■ 160 x 160 x 385		

  Picture	Part		Part number
	Optional chamber rack for 3 cassettes / containers for Lisa 17 Usable space - Tray size (mm): ■ 205 x 36 x 300 ■ 210 x 36 x 300 ■ 205 x 36 x 300		F523020X
	Optional chamber rack for 1 cassette / container for Lisa 17 Usable space - Tray size (mm): ■ 140 x 160 x 300		
	Optional chamber rack for 3 cassettes / containers for Lisa 22 Usable space - Cassette size (mm): ■ 205 x 36 x 385 ■ 210 x 36 x 385 ■ 205 x 36 x 385		F523021X
	Optional chamber rack for 1 cassette / container for Lisa 22 Usable space - Cassette size (mm): ■ 140 x 160 x 385		


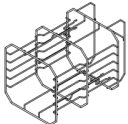
Picture	Part		Part number
	Optional chamber rack for 6 aluminium trays for Lisa 17 Usable space - Tray size (mm): ■ 190 x 15 x 312 ■ 190 x 22 x 312 ■ 190 x 22 x 312 ■ 190 x 22 x 312 ■ 190 x 22 x 312 ■ 190 x 18 x 312		F523033X
	Note: rack rotated 90°. Optional chamber rack for 3 cassettes / containers for Lisa 17 Usable space - Cassette size (mm): ■ 190 x 43 x 312 ■ 190 x 50 x 312 ■ 190 x 43 x 312		
	Optional chamber rack for 1 cassette / container for Lisa 17 Usable space - Cassette size (mm): ■ 160 x 160 x 312		

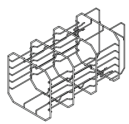Picture	Part		Part number
	Optional chamber rack for 6 aluminium trays for Lisa 22 Usable space - Tray size (mm): ■ 190 x 15 x 387 ■ 190 x 22 x 387 ■ 190 x 22 x 387 ■ 190 x 22 x 387 ■ 190 x 22 x 387 ■ 190 x 18 x 387		F523034X
	Note: rack rotated 90°. Optional chamber rack for 3 cassettes / containers* for Lisa 22 Usable space - Cassette size (mm): ■ 190 x 43 x 387 ■ 190 x 50 x 387 ■ 190 x 43 x 387		
	Standard chamber rack for 1 cassette / container for Lisa 22 Usable space - Cassette size (mm): ■ 160 x 160 x 387		

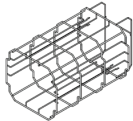Picture	Part	Part number
	Optional chamber rack for 2 aluminium trays and 3 wider aluminium trays for Lisa 22 Usable space - Tray size (mm): ■ 190 x 21 x 387 ■ 215 x 22 x 387 ■ 215 x 28 x 387 ■ 215 x 28 x 387 ■ 190 x 22 x 387	F523035X
	Note: rack rotated 90°. Optional chamber rack for 3 cassettes / containers* for Lisa 22 Usable space - Cassette size (mm): ■ 190 x 43 x 387 ■ 190 x 50 x 387 ■ 190 x 43 x 387	
	Standard chamber rack for 1 cassette / container for Lisa 22 Usable space - Cassette size (mm): ■ 160 x 160 x 387	

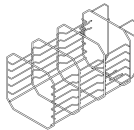   Picture	Part	Part number
	Optional chamber rack for 6 aluminium trays for Lisa 22 Usable space - Tray size (mm): ■ 190 x 15 x 387 ■ 190 x 22 x 387 ■ 190 x 22 x 387 ■ 190 x 22 x 387 ■ 190 x 22 x 387 ■ 190 x 18 x 387	F523041X
	Note: rack rotated 90°. Optional chamber rack for 1 cassette / container* for Lisa 22 Usable space - Cassette size (mm): ■ 190 x 150 x 387	
	Standard aluminium tray for Lisa 17 (186 x 19.5 x 287 mm)	F523204X
	Standard aluminium tray for Lisa 22 (186 x 19.5 x 379 mm)	F523205X
	Large aluminium tray for Lisa 22 (215 x 19.5 x 379 mm) Suitable for F523035X	F523211X
	Tray holder	F523001X

Picture	Part	Part number
	Drain tube kit with fittings	A812110X
	Drain tube	S230900X
	Permanent drain tube (3 m)	W230009X
	Mains cable	U38012XX
	Network data cable RJ45 (3 m)	A801500X
	Safety bracket kit	X051125X
	USB pen drive	V000004X
	Report printer	19721141
	USB-serial converter	A801503X

  
Picture	Part	Part number
	Label printer (label printer only)	19721109
	Label printer USB connection kit ■ USB connection cable ■ 1 roll of 2100 labels ■ 1 wax/resin ribbon ■ activation code instructions	19721123
	Label printer consumable kit ■ 2 rolls of 2100 labels ■ 2 wax/resin ribbons	A810500X
	QR code / Bar code reader for labels	19721132
	Water Distiller	19723101
	Multidem C27 water demineralizer	19723112
	Osmo water demineralizer (24 V)	19721143
	Wi-Fi dongle key	19721136

Picture	Part	Part number
	Lifting strap	F602001X
	Emergency door opening tool	F372106X
	Kit Helix Test (PCD + 25 strips)	T800206X
	Kit Helix Test (PCD + 250 strips)	T800207X

*: the rack, rotated 90°, accepts 5 standard aluminium trays.

CONSUMABLES

Picture	Part	Part number	When replace it
	Bacteriological filter (bagged)	W322400X	Every 400 cycles
	Door gasket	F460504X	Every 800 cycles

 Picture	Part	Part number	When replace it
	Dust filter	F364511X	Every 400 cycles
	400/800 cycle consumable kit Components: ■ 1 door gasket ■ 2 bacteriological filters ■ 2 dust filters	X050328X	Refer to each single component above

ACTIVATION CODES

Activation code	Description	Part number
Warranty Extension	Extends the device warranty by 1 year. Note: up to 3 Activation Codes of this type can be used on one device (for a total of 3 years extension); the code/s must be activated within the first year after the purchase of the device. Note: to acquire the activation code please refer to the Activation code instructions.	19730083
ioDent Service Extension	Extends the ioDent Intelligent Assist and Reprocessing Packages functionality by 1 year. Note: the extension of the functionality is possible via ioDent and can be extended without limitations. Note: the device must be connected to ioDent. Note: to acquire the activation code please refer to the Activation code instructions.	19730087

Activation code	Description	Part number
ioDent Reprocessing Extension	Extends the ioDent Reprocessing Package functionality by 1 year. Note: the extension of the functionality is possible via ioDent and can be extended without limitations. Note: the device must be connected to ioDent. Note: to acquire the activation code please refer to the Activation code instructions.	19730089

Authorized W&H service partners

A list and a map with your nearest W&H service partner are available at www.wh.com.

Documentation forms

CONTENTS

This section deals with the following subjects:

W&H installation report	131
Helix Test documentation form	134

W&H installation report

QUESTIONS

N.	Question	Answer	
Responsibility			
1	Was the head of the clinic/practice present during all the in-service?	Yes	No
Packaging and content			
2	Is the packaging of the sterilizer undamaged?	Yes	No
3	When unpacked, is the sterilizer undamaged?	Yes	No
4	Are all the contents of the package available (sterilizer ship-with)?	Yes	No
5	Are all the ordered accessories available with the sterilizer?	Yes	No
6	Have you removed all the protection covers from the sterilizer and from all the ship-with?	Yes	No

N.	Question	Answer	
Completeness of the Instructions for Use			
7	Were all sections of the Instructions for Use of the sterilizer covered and explained during the in-service?	Yes	No
Workplace suitability			
8	Is the allocated countertop for the sterilizer levelled and flat?	Yes	No
9	Are the recommended ventilation indications of the allocated area for the sterilizer respected?	Yes	No
10	Are the required minimum clearances respected?	Yes	No
11	Have you explained which water quality is required for the use of the sterilizer? Check and measure the $\mu\text{S}/\text{cm}$ of the water.	Yes	No
Involvement of the Head/personnel of the clinic/practice			
12	Have you shown to the Head/personnel of the clinic/practice the procedure for filling and draining the main and used water tanks?	Yes	No
13	Have you shown to the Head/personnel of the clinic/practice how to program the sterilizer?	Yes	No
14	Have you shown to the Head/personnel of the clinic/practice the cycle options?	Yes	No
15	Have you shown to the Head/personnel of the clinic/practice what the messages and alarms mean?	Yes	No

N.	Question	Answer	
16	Have you shown to the Head/personnel of the clinic/practice how to manually abort a cycle?	Yes	No
17	Have you shown to the Head/personnel of the clinic/practice the maintenance program and procedures?	Yes	No
18	Have you shown to the Head/personnel of the clinic/practice how to use all of the accessories?	Yes	No
19	Have you shown to the Head/personnel of the clinic/practice the advantages of having a USB connection for a pen drive?	Yes	No
20	Have you shown to the Head/personnel of the clinic/practice the advantages of having a LAN connection?	Yes	No
21	Have you suggested to the Head/personnel of the clinic/practice to periodically backup the data, stored on the USB pen drive and/or in a PC, on another safe support?	Yes	No
22	Have you shown to the Head/personnel of the clinic/practice the advantages of having a Wi-Fi connection (remote data saving)?	Yes	No
23	Have you explained to the Head/personnel of the clinic/practice the correct load type for each available sterilization program?	Yes	No
24	Have you shown to the Head/personnel of the clinic/practice how to prepare and place the load in the sterilizer chamber?	Yes	No
25	Have you explained to the Head/personnel of the clinic/practice to use only original parts and accessories on the sterilizer?	Yes	No
26	Have you shown and explained to the Head/personnel of the clinic/practice the safety advise section?	Yes	No

N.	Question	Answer	
27	Have you explained to the Head/personnel of the clinic/practice the cybersecurity information?	Yes	No
28	Have you explained to the Head/personnel of the clinic/practice how to perform the B&D Test?	Yes	No
29	Have you explained to the Head/personnel of the clinic/practice how to perform the Helix Test?	Yes	No
Check			
30	Have you executed a Vacuum Test?	Yes	No
31	Have you executed a B Universal 134 cycle program with the tray rack and trays inserted?	Yes	No
32	Are all connections to the sterilizer well positioned and plugged (accessories, etc...)?	Yes	No

INSTALLATION INFORMATION

VA131 Serial Number:	
Date:	
Purchased from:	
Installed by:	
Dr./Clinic name:	
Address:	
Phone:	
Receiver's signature:	
Installer's signature:	

INSTALLATION REPORT RECORDING

The report must be provided to the dealer from the manufacturer.

It's the dealer's responsibility to complete and archive the report for each single installation, according to their internal procedures.

The archived report must be available on demand should the manufacturer request it.

Helix Test documentation form

INSTRUCTIONS

Use this page to create a logbook tracing the effectiveness of the sterilization cycle during the whole lifespan of your sterilizer.

FORM

Date	Cycle n.	Operator	Released		Signature	Chemical indicator
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		

Date	Cycle n.	Operator	Released		Signature	Chemical indicator
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		

Date	Cycle n.	Operator	Released		Signature	Chemical indicator
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		
			Yes	No		



 **W&H Sterilization Srl**

via Bolgara, 2
Brusaporto (BG)
Italy
www.wh.com
+39 035 66 63 000

VA131 2019
Instructions for Use
ENG
Rev08
25/06/2026
Subject to changes